



BSR idware GmbH Jakob-Haringer-Str.3 A-5020 Salzburg Web: www.bsr.at

TC1200



Reference Manual

Datalogic Automation Srl Via Lavino, 265 40050 - Monte S. Pietro Bologna - Italy

TC1200 Reference Manual

Ed.: 09/2012

This manual refers to software release 1.1.0 or later.

© 2008 – 2012 Datalogic Automation S.r.I. • ALL RIGHTS RESERVED. • Protected to the fullest extent under U.S. and international laws. Copying, or altering of this document is prohibited without express written consent from Datalogic Automation S.r.I.

Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U.

Aladdin and is a trademark of Datalogic S.p.A. All other brand and product names mentioned herein are for identification purposes only and may be trademarks or registered trademarks of their respective owners.

Datalogic shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from the use of this material.

CONTENTS

	REFERENCES	ix
	Conventions	ix
	Reference Documentation	ix
	Services and Support	ix
	Patents	ix
	SAFETY AND COMPLIANCE NOTICES	.х
	FCC Compliance	. x
	Power Supply	. x
	CE Compliance	. x
	Handling	xi
1	INTRODUCTION	.1
1.1	Configuration Methods	.1
1.1.1	Configuration Using Datalogic Aladdin™	. 1
1.1.2	Configuration Using Serial Programming Strings	. 1
1.1.3	Configuration Using Programming Barcode Labels	. 1
1.2	Button and LED Indicators	2
1.3	Available Models	2
1.4	Accessories	3
2	INSTALLATION	.4
2.1	TC1200 CCD Scanner	4
2.1.1	Mechanical Installation	4
2.1.2	GFC-1200 105° Deflection Mirror	.5
2.1.3	CAB-TC1200 Adaptor Cable	.7
2.1.4	Electrical Connections	.8
2.2	TC1200 CCD Scan Engine	12
2.2.1	Mechanical Installation	12
2.2.2	Electrical Connections	13
2.2.3	USB-KBD Scan Engine Trigger for Barcode Configuration	16
2.3	Positioning	17
2.4	Dynamic Code Reading Applications	18
2.4.1	Line Speed vs. Exposure Time	18
2.4.2	Step-Ladder Applications.	20
243	Picket-Fence Applications	21
3	SOFTWARE CONFIGURATION STRINGS	22
3.1	TC1200 Configuration	22
4	BARCODE CONFIGURATION	40
4.1	Initial Setup	40
	Restore Default	40
	Interface Selection	40
4.2	Changing Default Settings	42
	Global Interface Features	43
	RS232	44
	Baud Rate	45
	Parity	45
	Data Bits	46
		. •

Stop Bits	46
R\$232/USB-COM	47
Intercharacter Delay	- /
Disable Character	48
Enable Character	48
ACK/NAK Ontions	48
ACK Character	48
NAK Character	49
ACK/NAK Timeout	49
ACK/NAK Retry Count	49
ACK/NAK Error Handling	
J J J J J J J J J J J J J J J J J J J	
USB-KBD	50
Keyboard Country	51
Keyboard Country (continued)	52
Keyboard Intercode Delay	52
Send Control Characters	53
USB Keyboard Speed	53
USB Keyboard Speed (continued)	54
READING PARAMETERS	55
Illumination Mode	
Operating Mode	56
Automatic Threshold	56
Phase Off Event	
Timeout	57
Serial Start	57
Serial Stop	
Label Programming Mode	
Exposure Mode	58
Reading Conditions	58
DATA FORMAT	59
Data Transmission	60
Code Verifier Mode	60
Match String	60
Wrong Code String	60
	61
GIODAI SUITIX	
Tropomit AIM IDo	01
Transmit Custom Label IDa	02
Custom Label Identifiere	02
Custom Label Identifiers (continued)	02
Custom Label Identifiers (continued)	03
Custom Code Identifiers (continued)	65
DIGITAL OUTPUTS	66
Output 1 Activation Event	67
Output 1 Deactivation Event	67
	67
Output 1 Activation Event	67

Output 2 Activation Event	.68
Output 2 Deactivation Event	.68
Output 2 Deactivation Timeout	.68
Output 2 Activation Event	.68
POWER SAVE	.69
Sleep Mode Timeout	.70
CODE SELECTION	.71
Positive / Negative Background	. 72
UPC-A	.73
Check Character Tx	.73
Expand to EAN-13	.73
Number System Tx	.73
UPC-A Minimum Reads	.74
Coupon Control	.74
UPC-E	.75
Check Character Ix	.75
Expand to UPC-A	.75
Expand to EAN-13	.75
Number System Tx	.76
UPC-E Minimum Reads	.76
EAN-13	.77
Check Character Tx	.77
ISBN Conversion	.77
ISSN Conversion	.77
Flag 1 Character	.78
EAN-13 Minimum Reads	.78
Coupon Control	.78
EAN-8	.79
Check Character Tx	.79
Expand to EAN-13	.79
EAN-8 Minimum Reads	.79
Enable Optional P2 Add-On	. 80
Enable Optional P5 Add-On	. 80
P2 Minimum Reads	.80
P5 Minimum Reads	.81
Optional Add-On Timer	.81
GTIN Format	.82
Decoding Level	.82
Character Correlation	.82
In-Store Minimum Reads	.83
Code 39	.83
Code 39 Full ASCII	.83
Code Length Control	.83
Set Length	.84
Code 39 Check Tx	.84
Code 39 Start/Stop Tx	.84
Code 32 (Italian Pharmaceutical)	.85
Code 32 Check Tx	.85
Code 32 Start/Stop Tx	.85
Check Calculation	.86
Minimum Reads	.86
Decoding Level	.87
Character Correlation	.87

Interdigit Ratio	.87 88
Stitching	88
Code 128	.00 .80
GS1-128 Enable	.00
Code Length Control	.89
Set Length	.89
Expand to Code 39	.90
Check Tx	.90
Function Character Tx	. 90
Sub-Code Change Tx	. 90
Minimum Reads	.91
Decoding Level	.91
Character Correlation	.92
Quiet Zones	.92
	.92
ISBT 128 Concatenation	.93
Concatenation Mode	.93
Dynamic Concatenation Timeout.	.93
Interleaved 2 of 5	.94
Set Length	.94
Check Calculation	.94
Check Ty	95
Minimum Reads	96
Decoding Level	96
Character Correlation	.97
Stitching	.97
Zero Pattern	.97
Standard 2 of 5	.98
Code Length Control	.98
Set Length	.98
Check Calculation	.98
Check Tx	.99
Minimum Reads	.99
Decoding Level	100
Character Correlation	100
Stitching	100
Industrial 2 of 5	101
Code Length Control	101
Set Length	101
Check Calculation	102
Uneck IX	102
Character Correlation	103
Stitching	103
Codabar	103
Code Length Control	104
Set Length	104
Codabar ABC	105
Concatenation Mode	105
Dynamic Concatenation Timeout	105
Check Calculation	106
Check Tx	106
Start/Stop Set	106

Start/Stop Tx	1	07
	1	07
	1	07
Decoding Level	1	08
	1	00
Ouiot Zonoo	1	00
Quiet Zones	1	09
Codo 11	1	10
Code Longth Control	1	10
Sot Longth	1	10
Check Calculation	1	10
Check Ty	1	11
Minimum Deads	1	11 12
Decoding Lovel	1	12
Character Correlation	1	12
	1	13
Stitching	1	13
CS1 DataPar Omnidiractional	1	17
GS1 DataBar Omnidiractional GS1 128 Emulation	1	14
Minimum Doods	1	14
CS1 DataDar Expanded	1	14
CS1 DataDat Expanded CS1 129 Emulation	1	10
Code Longth Control	1	10
Set Longth	1	15
Minimum Doodo	1	10
Coupon Control	1	10
Coupon Control	1	10
GS1 DataDat Limited GS1 128 Emulation	1	17
Minimum Deads	1	17
Code 03	1	11/ 10/
Code Jength Control	1	10
Set Length	1	18
Check Calculation	1	10
Check Ty	1	10
Minimum Reads	1	20
Decoding Level	1	20 20
Character Correlation	1	20 21
Oujet Zones	1	21
Stitching	1	21
MSI	1	22
Code Length Control	1	22
Set Length	1	22
Check Calculation	1	23
Check Tx	1	23
Minimum Reads	1	24
Decoding Level	1	24
Stitching	1	25
Plessev	1	25
Code Length Control	1	25
Set Length	1	_0 25
Check Calculation	1	26
Check Tx	1	26 26
Minimum Reads	1	26
Decoding Level	1	27
•		

	Character Correlation	127
	Stitching	127
5	PARAMETER REFERENCES	128
5.1	RS232 Parameters	128
5.1.1	RS232 Only	128
5.1.2	RS232/USB COM Parameters	129
5.2	Reading Parameters	133
5.2.1	Illumination Mode	.133
5.2.2		104
5.2.3	Guou Reau LED	107
52.4	Dreset Decines	137
53	Data Formatting	138
5.3.1	Global Prefix/Suffix	139
532	Code Identifiers	141
5.3.3	Code Verifier	
5.4	Digital Outputs	145
5.5	Power Save	146
5.6	Code Selection	146
5.6.1	Concatenation	148
5.6.2	Set Length	149
6		151
6.1	Cleaning	151
7		152
71	Reading Diagrams	153
1.1		100
Α	DEFAULT PARAMETERS TABLE	154
В	KEYPAD	158
С	ASCII/HEX/DECIMAL CHART	160
_		400
ט	RESERVED CHARACTERS	162

REFERENCES

CONVENTIONS

This manual uses the following conventions:

"User" or "Operator" refers to anyone using a TC1200.

"Device" refers to the TC1200.

"You" refers to the System Administrator or Technical Support person using this manual to install, mount, operate, maintain or troubleshoot a TC1200.

REFERENCE DOCUMENTATION

The documentation related to the TC1200 management is listed below:

- GFC-TC1200 Installation Manual
- Datalogic Aladdin™ Help On Line

SERVICES AND SUPPORT

Datalogic provides several services as well as technical support through its website. Log on to **www.automation.datalogic.com** and click on the <u>links</u> indicated for further information:

PRODUCTS

Search through the links to arrive at your product page which describes specific Info, Features, Applications, Models, Accessories, and Downloads including the <u>Datalogic</u> <u>Aladdin</u>[™] utility program, which allows device configuration using a PC. It provides RS232 and USB-COM interface configuration.

- <u>SERVICE</u>
 - **Overview** Warranty Extensions and Maintenance Agreements
 - Sales Network- Listing of Subsidiaries, Repair Centers, Partners
 - <u>Helpdesk</u>
 - Material Return Authorization

PATENTS

This product is covered by one or more of the following patents:

US Patents: 5,311,000; 5,481,098; 5,929,421; 5,992,740; 6,098,883; 6,260,764; 6,443,360 B1; 7,075,663 B2.

European Patents: 789,315 B1; 926,620 B1; 997,760 B1; 1,217,571 B1; 1,804,089 B1.

Chinese Patent: ZL200680050007,8.

Additional patents pending.

SAFETY AND COMPLIANCE NOTICES

FCC COMPLIANCE

Modifications or changes to this equipment without the expressed written approval of Datalogic could void the authority to use the equipment.

This device complies with PART 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference which may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

POWER SUPPLY

This product is intended to be installed by Qualified Personnel only.

This accessory device is intended to be supplied by a UL Listed or CSA Certified Power Unit with «Class 2» or LPS power source, which supplies power directly to the scanner via the 9-pin or USB connector.

CE COMPLIANCE

Warning:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

HANDLING

The TC1200 is designed to be used in an industrial environment and is built to withstand vibration and shock when correctly installed, however it is also a precision product and therefore before and during installation it must be handled correctly to avoid damage.

• avoid that the scanners hit one another causing damage. They should be handled separately.



• avoid that the scanners are dropped (exceeding shock limits).



• do not fine tune the positioning by striking the scanner or bracket.



• do not weld the scanner into position which can cause electrostatic, heat or output window damage.



• do not spray paint near the scanner which can cause output window damage.



1 INTRODUCTION

The TC1200 compact CCD reader is the perfect solution for many OEM applications. It contains a <u>built-in decoder</u> and <u>multi-standard interface</u>. Due to its well-balanced mix of technical characteristics it is perfect for integration into custom equipment, setting a new standard in this product class.

This Reference Manual provides connection diagrams, default parameter listing, complete application parameter settings, specific technical features and reading diagrams.

1.1 CONFIGURATION METHODS

1.1.1 Configuration Using Datalogic Aladdin™ (for RS232/USB-COM Interfaces)

The easiest way to configure TC1200 is by using the **Datalogic Aladdin™** utility program downloadable from: <u>www.automation.datalogic.com</u>.

Aladdin allows you to program the TC1200 reader by selecting configuration commands through a user-friendly graphical interface running on a PC. These commands are sent to the reader over the selected communication interface, or they can be printed as barcodes to be scanned.

Aladdin also provides Help On-Line files explaining how to use the program as well as descriptions of the configuration parameters.

Aladdin also provides the ability to perform a software upgrade for the connected device (see the Datalogic Aladdin[™] Help On-Line for more details).

1.1.2 Configuration Using Serial Programming Strings (for RS232/USB-COM Interfaces)

This manual contains the <u>complete</u> set of command strings for TC1200 configuration. These strings can be sent via the RS232/USB-COM interface using a terminal emulator such as HyperTerminal.

Refer to Chapter 3 of this manual for configuration procedures using Serial Strings sent by the Host.

1.1.3 Configuration Using Programming Barcode Labels (for all Interfaces)

Refer to Chapter 4 of this manual for configuration procedures using Programming Bacode Labels.

1.2 BUTTON AND LED INDICATORS

On the face of the TC1200 scanner a keypad is present with a button and three indicator LEDs which are described in the table below.



TC1200 Scanner

INDICATORS	Color	MEANING
POWER LED	Blue	ON = Power ON
		OFF = Power OFF or standby (only USB model)
GOOD Read LED Green		ON = Good Read
		OFF = No Read
		Blinks = USB enumeration
TRIGGER LED Yellow		ON = External trigger or button pressed
		OFF = No trigger
Button		Press for manual trigger

1.3 AVAILABLE MODELS

The TC1200 reader is available in models that differ in regard to the following characteristics:

- **Output Interface**
- Enclosure

The following models are therefore available:

- TC1200-1000 CCD Reader, RS232
- TC1200-1100 CCD Reader, USB
- TC1200-0000 Scan Engine CCD Reader, RS232
- TC1200-0100 Scan Engine CCD Reader, USB

1.4 ACCESSORIES

The following accessories are available to simplify installation and optimize product performance:

Name	Description	Part Number
CAB-TC1200	CBX Adapter Cable 10-30 Vdc Power Supply	93A051388
CAB-TC1200	to C-BOX 25-p D-sub Fem (TC1100 Compatible)	93A050026
GFC-1200	105° Deflection Mirror for TC1200	93ACC1891



The TC1100 Compatible cable does not provide 10-30 Vdc to 5 Vdc conversion. TC1200 must be powered only with 5 Vdc.

2 INSTALLATION

2

2.1 TC1200 CCD SCANNER

2.1.1 Mechanical Installation

The diagram below gives the overall dimensions of the reader and may be used for its installation.

If you do not use the mounting bracket and screws in the packaging, to avoid damage to the product case and internal components, make sure that mounting screws do not exceed the threaded hole depth of 4 mm.





Figure 1 - Overall Dimensions

2.1.2 GFC-1200 105° Deflection Mirror

The GFC-1200 is a 105° deflection mirror that is mounted directly to the TC1200 Scanner.



Figure 2 - GFC-1200

The overall dimensions are provided in the figure below and can be used for its mounting.



Figure 3 - GFC-1200 Overall Dimensions

To fix a TC1200-1x00 Scanner to the GFC-1200, use two **M3x5** mm screws included in the GFC-1200 package. An extra screw is also supplied as a spare part.

Refer to the figure below.

2



Figure 4 – Fixing TC1200 Scanner to GFC-1200

Based upon the 105° orientation, this mirror embeds the 15° skew angle (\pm 1.5°), necessary to avoid direct light reflection from the target label. This feature allows mounting the TC1200+GFC-1200 group parallel to the target surface, keeping the overall mounting space to a minimum.



Figure 5 – Maintaining Minimum Skew Angle

2.1.3 CAB-TC1200 Adapter Cable

In order to connect the TC1200 to a CBX100 connection box, you can use the CAB-TC1200 adapter cable. This cable converts the 10-30 Vdc system power to the 5 Vdc necessary for the TC1200 reader. The cable has the following pinout:

25-Pin Connector		
13,9	VDC	Power supply input voltage + (10-30 Vdc)
25,7	GND	Power supply input voltage -
1	SHIELD	Cable Shield
18	EXT TRIG A	External Trigger A (polarity insensitive)
19	EXT TRIG B	External Trigger B (polarity insensitive)
8	OUT1 +	Output 1 positive
11	OUT2 +	Output 2 positive
12,22	OUT1/2 -	Output 1/2 negative
20	RX	Receive data (RS232 Aux on CBX)
21	ТХ	Transmit data (RS232 Aux on CBX)
2,3,4,5,6,10,23,24	NC	Not connected



Figure 6 – Typical Layout Using CAB-TC1200

2.1.4 Electrical Connections

2

The TC1200-1000 Scanner is equipped with a 9-pin Male D-Sub connector for connection to the power supply and input/output signals. The details of the connector pins are indicated in the following table:



Figure 7 - 9-pin Male D-sub Connector

9-pin Connector		
1	VCC	+5 Vdc
2	GND	Ground
3	RX	Receive Data
4	ТХ	Transmit Data
5	OUT1 +	Output signal 1, positive
6	OUT1/2 -	Output signal 1/2, negative
7	OUT2 +	Output signal 2, positive
8	EXT TRIG A	External Trigger Input (polarity insensitive)
9	EXT TRIG B	External Trigger Input (polarity insensitive)

Table 1 - TC1200-1000 Scanner Pinout

The TC1200-1100 Scanner is equipped with a USB Type A connector for connection to the PC standard USB Port. The details of the connector pins are indicated in the following table:



Figure 3 – USB Type A Connector

USB Type A Connector		
1	VCC	+5 Vdc
2	DATA -	USB Data, negative
3	DATA +	USB Data, positive
4	GND	Ground

Table 2 - TC1200-1100 Scanner Pinout

RS232 Interface

The TC1200-1000 Scanner can communicate with the Host using the RS232 signals provided on the 9-pin connector. The pins are indicated in Table 1 and in the following diagram:

It is always advisable to use shielded cables. The overall maximum cable length must be less than 15 m (49.2 ft).



Figure 8 - RS232 Interface Connection to Host

Input

2

There is an input available on the TC1200-1000 Scanner relative to the External Trigger used to signal the reading phase for On Line Operating Mode. The pins are indicated in Table 1. This input is optocoupled, polarity insensitive and can be driven by both an NPN or PNP type command. The connections are indicated in the following diagrams:



Figure 4 - Input NPN Command Using External Power



Figure 5 - Input PNP Command Using External Power



Figure 6 - Input NPN Command Using TC1200 Power



Figure 7 - Input PNP Command Using TC1200 Power

The External Trigger Input can also be activated by the external button (Push Button = Trigger On).

Outputs

There are two outputs available on the TC1200-1000 Scanner. Each output can be activated on one of the following events: Good Read, No Read, Wrong Code.

The active level (high or low) of each Output can also be configured in software.

The pins are indicated in Table 1. The connections are indicated in the following diagram:



Figure 9 – Output1 Connection. Example NPN



Figure 9 – Output2 Connection. Example NPN

2.2 TC1200 CCD SCAN ENGINE

2

2.2.1 Mechanical Installation

The diagram below gives the overall dimensions of the TC1200 Scan Engine and may be used for its installation.



2.2.2 Electrical Connections

The TC1200-0000 (RS232) Scan Engine is equipped with an 8-pin and a 10-pin DF13 connector for connection to the power supply, data and input/output signals.

The TC1200-0100 (USB) Scan Engine is equipped with a 10-pin DF13 connector for connection to the power supply and data signals. Connector <u>J2 is not mounted</u> and I/O signals are not available.

The details of the connector pins are indicated in the following table:



Figure 10 – Scan Engine Connectors

J1		
Pin	Signal	Description
1	D-	USB Data negative
2	D+	USB Data positive
3	GND	power ground
4	GND	power ground
5	TX	transmit data
6	RTS	NOT USED
7	RX	receive data
8	CTS	NOT USED
9	VCC	+5 Vdc
10	GND	power ground

J2 (RS232 model Only)				
Pin	Signal	Description		
1	GND	power ground		
2		NC		
3	OUT2 +	Output 2 positive		
4	OUT1/2 -	Output 1/2 negative		
5	OUT1 +	Output 1 positive		
6		NC		
7	EXT TRIG A	External Trigger Input (polarity insensitive)		
8	EXT TRIG B	External Trigger Input (polarity insensitive)		

RS232 Interface

2

The TC1200-0000 Scan Engine can communicate with the Host using the RS232 signals provided on the J1 connector. The pins are indicated in Table 1 and in the following diagram:

It is always advisable to use shielded cables. The overall maximum cable length must be less than 15 m (49.2 ft).



Figure 12 - RS232 Interface Connection to Host

USB Interface

The TC1200-0100 Scan Engine can communicate with the Host using the USB signals provided on the J1 connector. The pins are indicated in Table 1 and in the following diagram:

It is always advisable to use shielded cables. The overall maximum cable length must be less than 15 m (49.2 ft).



Figure 13 - USB Interface Connection to Host

Input

There is an input available on the TC1200-0000 Scan Engine relative to the External Trigger used to signal the reading phase for On Line Operating Mode. The pins are indicated in Table 1. This input is optocoupled, polarity insensitive and can be driven by both an NPN or PNP type command. The connections are indicated in the following diagrams:



Figure 14 - Input NPN Command Using External Power



Figure 15 - Input PNP Command Using External Power



Figure 15 - Input NPN Command Using TC1200 Power



Figure 16 - Input PNP Command Using TC1200 Power

Outputs

There are two outputs available on the TC1200-0000 Scan Engine. Each output can be activated on one of the following events: Good Read, No Read, Wrong Code.

The active level (high or low) of each Output can also be configured in software.

The pins are indicated in Table 1. The connections are indicated in the following diagram:



Figure 17 – Output1 Connection. Example NPN



Figure 18 – Output2 Connection. Example NPN

2.2.3 USB-KBD Scan Engine Trigger for Barcode Configuration

If it ever becomes necessary to reconfigure a USB Scan Engine model which has been configured for one of the USB-KBD Interface applications, you can connect a push button trigger by soldering it between pins 12 and 13 of the motherboard connector as shown in the figure below.



It is recommended to return to the USB-COM interface and choose one of the serial configuration methods. Then you can restore the USB-KBD selection.

2.3 POSITIONING

The TC1200 Scanner is able to decode barcode labels at a variety of angles, however significant angular distortion may degrade reading performance.

When mounting the TC1200 take into consideration these three ideal label position angles: **Pitch 0°, Skew 10° to 30° and Tilt 0°**. Follow the suggestions for the best orientation:

The **Pitch** angle is represented by the value **P** in the figure. Position the reader in order to **minimize** the **Pitch** angle.



Figure 19 - Pitch Angle

The Skew angle is represented by the value S in the figure. Position the reader to assure at least 10° for the Skew angle. This avoids direct light reflection.



Figure 20 - Skew angle

The **Tilt** angle is represented by the value **T** in the figure. Position the reader in order to **minimize** the **Tilt** angle.



Figure 21 - Tilt angle

2.4 DYNAMIC CODE READING APPLICATIONS

2.4.1 Line Speed vs. Exposure Time

The *Exposure Time* defines the time during which the image will be exposed to the reader's sensor for acquisition. In general, a longer time corresponds to a lighter image but is susceptible to blurring due to the code movement; a shorter exposure time corresponds to a darker image.

Assuming:

- X: Code Resolution (mm)
- **T**_{exp}: Exposure Time (s)
- LS: Line Speed (mm/s)

for dynamic reading applications, the essential condition to avoid blurring effects between two adjacent elements is:

$LS * T_{exp} \le X$

For TC1200, the maximum exposure time is $300 \ \mu s$ in a dark environment (no ambient light) using Strobed Exposure Mode. This value, and therefore line speed, is affected by the following environmental conditions:

- Code Resolution: a decrease in code resolution, (i.e. 2X) allows an increase in maximum line speed. There is a decrement of overlapping effects between two adjacent elements.
- **Code/Background Contrast**: a decrease in image contrast (poor quality codes, reflective transparent coverings, different supports and printing techniques) requires a decrease in maximum line speed.
- Ambient Light: an increase in external lighting conditions allows an increase in maximum line speed.
- **Reading Distance**: an increase or decrease in reading distance with respect to the center of the focal distance for a given code resolution, (see reading diagram), requires a decrease in maximum line speed.

These environmental conditions are automatically compensated for by one of the selected Reading Condition Recipes (see par 5.2.5. for more details), as well as by the Exposure Mode parameter (see par. 5.2.4 for more details).

The (theoretical) line speed **LS** can be calculated using the following formula:

$0.8 * X / T_{exp} = LS$

Examples:

For TC1200, T_{exp} max is = 300 µs with No Ambient Light (0 Lux) and Strobed Exposure Mode.

Using the maximum exposure time of 300 $\mu\text{s},$ the following line speeds can be obtained depending on the code resolution:

Code Resolution	Line Speed Calculation	
20 mils	[0.8 ∗ 0.508/300 μs] = 1354 mm/s	
14 mils	[0.8 * 0.356/300 μs] = 949 mm/s	
12 mils	[0.8 * 0.305/300 μs] = 813 mm/s	
10 mils	[0.8 * 0.254/300 μs] = 677 mm/s	
8 mils	[0.8 * 0.203/300 μs] = 541 mm/s	

19

2.4.2 Step-Ladder Applications

In Step-Ladder reading applications scanning is perpendicular to the code motion direction (Figure 11). For linear barcode reading, this has the advantage of being insensitive to blurring and code resolution since the code elements remain the same between consecutive scans.

The number of scans performed on the code and therefore the decoding capability is influenced by the following parameters:

- number of scans per second (320 scans/sec. max)
- line speed (code motion) see par. 2.4.1
- label dimensions

At least 5 scans during the code passage should be allowed to ensure a successful read.

The number of effective scans performed by the reader in step-ladder is given by the following formula:



Figure 11 - "Step-Ladder" Reading

Example:

The TC1200 (320 scans/sec.), for a 25 mm high code moving at a line speed of 500 mm/s performs:

[(25/500) * 320] - 2 = 14 effective scans.

2.4.3 Picket-Fence Applications

In Picket-Fence reading applications scanning is parallel to the code motion direction (Figure 12). This makes decoding sensitive to blurring and to code resolution since the code elements change between consecutive scans.

The number of scans performed on the code and therefore the decoding capability is influenced by the following parameters:

- number of scans per second (320 scans/sec. max)
- line speed (code motion) see par. 2.4.1
- label dimensions
- reading field width

NOTE

The reading field width for dynamic applications is reduced with respect to the static reading field width (reading diagram).

At least 5 scans during the code passage should be allowed to ensure a successful read.

The number of effective scans performed by the reader in picket-fence is given by the following formula:



Figure 12 - "Picket-Fence" Reading

Example:

A 60 mm wide code moving in a point where the reading field is 160 mm wide at a 1000 mm/s line speed, the TC1200 (320 scans per sec.), performs:

[((160-60)/1000) * 320] - 2 = 30 effective scans

3 SOFTWARE CONFIGURATION STRINGS

3.1 TC1200 CONFIGURATION

TC1200 RS232 models (as well as USB models having the USB-COM Interface selected), can be configured using the serial strings contained in this chapter:

RS232 Models

To configure TC1200 RS232 models by using the configuration strings:

1) Connect your TC1200 to a PC RS232 port according to the information in chapter 2. Set the PC serial port to the TC1200 default RS232 communication parameters (see Appendix A).



To configure the reader using configuration strings, you must enter Service Mode which automatically sets the reader communication parameters to 115200,N,8,1. You must therefore set the host accordingly for RS232 communications. Upon exiting Service Mode, the programmed communication parameters will be restored.

- **2)** Using a Terminal Emulation Program, send the Restore Current Interface (Custom) Default string to the reader using the syntax described on the next page.
- 3) Send all the necessary command strings according to your application's requirements.

USB Models

To configure TC1200 USB models (only for USB-COM Interface) by using the configuration strings:

- **1)** Download and install the USB-COM driver from the TC1200 product page at <u>www.automation.datalogic.com</u>, (bundled with the Aladdin program).
- 2) Connect your TC1200 to a PC USB port according to the information in chapter 2.
- 3) Using a Terminal Emulation Program, send the Enter Service Mode command
- **4)** Send the Restore Current Interface (Custom) Default string to the reader using the syntax described on the next page.
- 5) Send all the necessary command strings according to your application's requirements.



Configuration of TC1200 USB-KBD Interface applications, can be accomplished by reading the barcodes in chapter 4.

Command Syntax

1. Enter Service (Serial String Programming) Mode

\$S<CR>

This command automatically sets the reader communication parameters to 115200,N,8,1.

2. Send Command

\$ Command Parameter Value <cr></cr>

Where:

Command:		Description	
	HAXX	Interface Selection	
	ΑΑ	Enable All Symbologies	
	AD	Disable All Symbologies	
	R	Reset Reader	
	CXXXXXX	Write Single Configuration Item to RAM	
Parameter:			
	XXXX	A 4-character ASCII string See Serial Configuration Strings Table	
Value:			
	XX	A 2-character Hex string See Serial Configuration Strings Table	

3. Apply and Save Configuration to FLASH (permanent memory) and Exit Service Mode

\$Ar<CR>

This command automatically returns the reader to the programmed communication parameters.

Example 1:

3

1. \$S<CR>

Enter Service Mode

2. \$CLFCA02<CR>

Write command "Convert to Lower Case" to current configuration

3. \$Ar<CR>

Apply and Save Configuration to FLASH (permanent memory) and Exit Service Mode.

Each configuration parameter setting removes the condition previously active for that parameter.

Example 2:

- 1. \$S<CR> Enter Service Mode
- 2. \$HA05<CR> Select RS232 Interface
- 3. \$Ar<CR>

Apply and Save Configuration to FLASH (permanent memory) and Exit Service Mode.

Example 3:

1. \$+\$!<CR> Read Application Software Release

Example 4:

1. \$S<CR> Enter Service Mode

Set Serial START string to the single character "U". (20 characters max).



For commands requiring string values, you must enter the complete string (maximum number of characters) for that command. This is done by filling the unused characters with zeros (NUL).
SERIAL CONFIGURATION STRINGS

ENTER/EXIT CONFIGURATION COMMANDS	
Description	Command
Enter Service Mode (configuration) sets communication parameters to 115200,N,8,1	S
Exit Service Mode (configuration) returns to programmed communication parameters	s
Apply Configuration to RAM (temporary memory) and Exit Service Mode	r01
Apply and Save Configuration to FLASH (permanent memory) and Exit Service Mode	Ar



To configure the reader using configuration strings, you must enter Service Mode which automatically sets the reader communication parameters to 115200,N,8,1. You must therefore set the host accordingly for RS232 communications. Upon exiting Service Mode, the programmed communication parameters will be restored.

CONFIGURATION COMMANDS		
Description	Command	
Write Single Configuration Item to RAM (temporary memory)	Cxxxxx	
Read Single Configuration Item from RAM (temporary memory)	CXXXX	
Reset Reader	R	
Read Application Software Release (does not require Enter/Exit Service Mode)	\$+\$!	
Host Commands Obey	CIFIH00	
Host Commands Ignore	CIFIH01	
Enable all Symbologies	AA	
Disable all Symbologies	AD	



To read a particular parameter setting from the reader, send the read parameter command without any value. The reader will respond with its currently configured value.



The Read Application Software Release command is a direct command that does not require entering Service Mode.

INTERFACE SELECTION COMMANDS		
Description	Command	
Restore Current Interface (Custom) Default Configuration	HA00	
R\$232	HA05	
USB-COM	HA47	
USB-KBD	HA35	
USB-KBD-ALT	HA2B	
USB KBD-APPLE	HA2C	



The Interface Selection commands store and load the new interface type with its factory defaults into the current configuration.

3

	RS232 ONLY PARAMETERS		
Description		Parameter	Value
Baud Rate	1200	R2BA	00
	2400		01
	4800		02
	9600		03
	19200		04
	38400		05
	57600		06
	115200		07
Parity	none	R2PA	00
	even		01
	odd		02
Data Bits	7	R2DA	00
	8		01
Stop Bits	1	R2ST	00
-	2	1	01

RS232/USB-COM PARAMETERS			
Description		Parameter	Value
Intercharacter Delay	No delay or from 10 to 990 ms	R2IC	а
Disable Character	host command character which disables the reader	R2DC	b
Enable Character	host command character which enables the reader	R2EC	b
ACK/NAK Options	disable	R2AE	00
	enable for label transmission		01
	enable for host command acknowledge		02
	enable for label transmission and host command acknowledge		03
ACK Character	Selects character to be used as ACK	R2AC	С
NAK Character	Selects character to be used as NAK	R2NA	С
ACK/NAK Timeout Value	No timeout or from 200 to 15000 ms	R2AT	d
ACK/NAK Retry Count	From 0 to unlimited retries	R2AR	е
ACK/NAK Error Handling	Ignore errors detected	R2EH	00
-	Process errors as valid ACK character		01
	Process errors as valid NAK character		02

a = Hex value from 00 to 63 representing the decimal number (00 = no delay; all others x10 ms)

b = Hex value from **00** to **FE** representing the ASCII character

c = Hex value from **00** to **FF** representing the ASCII character

d = Hex value from 00 to 4B representing the decimal number (00 = timeout disabled; all others x200 ms)

e = Hex value from 00 to FF representing the number of retries (00 = no retries; 01-FE = 1-254 retries; FF = unlimited retries)

USB-KBD / USB-I	(BD-ALT / USB-KBD-APPLE PARAMETERS		
Description		Parameter	Value
Keyboard Country Mode	*US	KBCO	00
	*Belgium		01
	*Britain		02
	Croatia		11
	Czechoslovakia		0E
	Denmark		03
	*France		04
	*Germany		05
	Hungary		0D
	*Italy		06
	Japanese (106 key)		0C
	Norway		07
	Poland		12
	Portugal		08
	Romania		10
	Slovakia		0F
	*Spain		09
	*Sweden		0A
	Switzerland		0B
Keyboard Intercode Delay	No delay or from 1 to 99 seconds	KBID	f
Send Control Characters	CTRL + KEY	KBSC	00
	CTRL + SHIFT + KEY		01
	Special Function KEY		02
USB Keyboard Speed	1 ms	KBSP	01
	2 ms		02
	3 ms		03
	4 ms		04
	5 ms		05
	6 ms		06
	7 ms		07
	8 ms		08
	9 ms		09
	10 ms		0A

f = Hex value from **00** to **63** representing the decimal number (00 = no delay; all others x1 s)

*= Valid for USB-KBD-APPLE

	READING PARAMETERS PARAMETERS		
Description		Parameter	Value
Illumination Mode	Disabled	SPIL	00
	Triggered		01
	Enabled		02
Operating Modes	On Line SNRM	00	
	Serial On Line		01
	Automatic		02
	Automatic (Object Sense)		03
	Test		04
Automatic Threshold	From 2 to 255 scans without a code	SNAT	g
Phase Off Event	Trigger Stop	SNTO	00
	Timeout		01
	Trigger Stop-Timeout		02
Timeout	From 40 to 5100 ms	SNET	h
Serial Start	Any string of characters (max 20) between 00-FE	STON	i
Serial Stop	Any string of characters (max 20) between 00-FE	STOF	i
LED Indication	On Decode	BPIN	00
	After Transmission		01
Label Programming Mode	Disabled	FAPM	00
	Enabled		01
Exposure Mode	Continuous	SPST	00
	Strobed		01
Reading Conditions	Auto	SNCO	00
	Standard		01
	High Resolution (Far)		02
	Difficult		03
	Blurred (Near)		04

g = Hex value from 02 to FF representing the number of scans without a code

h = Hex value from **02** to **FF** representing the decimal number (*x20 ms*)

i = Hex value from **00** to **FE** representing the ASCII character

	DATA FORMAT		
Description		Parameter	Value
Data Transmission	On Decode	LFTX	01
	After Phase Off		00
Code Verifier Mode	Disabled	LFCV	00
	Transmit Wrong String		01
	Transmit Wrong Code		02
Match String	Any string of characters (max 20) between 00-FE	COVS	k
Wrong Code String	Any string of characters (max 20) between 00-FE	WCVS	k
Case Conversion	Disable	LFCA	00
	Upper Case		01
	Lower Case		02
Global Prefix (Header)	Any string of characters (max 20) between 00-FE	LFPR	k
Global Suffix (Terminator)	Any string of characters (max 20) between 00-FE	LFSU	k
No Read String	Any string of characters (max 20) between 00-FE	NORS	k
Character Conversion	An 8-character string between 00-FF	LFCH	m
Transmit AIM IDs	Disable	AIEN	00
	Enable		01
Transmit Custom Label IDs	Disable	IDCO	00
	Prefix		01
	Suffix		02
GS1-128 AIM ID	Disable	U8AI	00
	Enable		01

k = Hex value from **00** to **FE** representing the ASCII character

m =8 Hex values from **00** to **FF** representing the 8 ASCII characters (*FF* = *no replacement or ignore*)

	DATA FORMAT		
Description		Parameter	Value
Custom Code Identifiers	Any string of characters (max 3) between 00-FE		
UPC-A		ABID	k
UPC-E		EBID	k
EAN-8		8BID	k
EAN-13		3BID	k
UPC-A/P2		A2ID	k
UPC-A/P5		A5ID	k
UPC-E/P2		E2ID	k
UPC-E/P5		E5ID	k
EAN-8/P2		82ID	k
EAN-8/P5		85ID	k
EAN-13/P2		32ID	k
EAN-13/P5		35ID	k
ISBN		ISID	k
ISSN		INID	k
GTIN for EAN/UPC w/o Add-On		GBID	k
GTIN for EAN/UPC w P2		G2ID	k
GTIN for EAN/UPC w P5		G5ID	k
Code 39		C3ID	k
Code 32		P3ID	k
Code 128		C8ID	k
GS1-128		U8ID	k
ISBT 128		18ID	k
Interleaved 2 of 5		I2ID	k
Standard 2 of 5		S2ID	k
Codabar		CBID	k
ABC Codabar		ACID	k
Code 11		C1ID	k
GS1 Databar 14 (Omnidirectional)		4BID	k
GS1 Databar Expanded		XBID	k
GS1 Databar Limited		LBID	k
Code 93		C9ID	k
MSI		MSID	k

k = Hex value from **00** to **FE** representing the ASCII character

	DIGITAL OUTPUTS		
Description		Parameter	Value
OUTPUT 1			
Activation Event	Disable	OUA1	00
	Good Read		01
	No Read		02
	Wrong Code		03
Deactivation Event	Disable	OUD1	00
1	Timeout		01
	Reading Phase Active		02
Deactivation Timeout	100 to 25500 ms	OUT1	n
Active Level	Closed	OUL1	00
1	Open		01
OUTPUT 2			
Activation Event	Disable	OUA2	00
1	Good Read		01
	No Read		02
	Wrong Code		03
Deactivation Event	Disable	OUD2	00
	Timeout		01
1	Reading Phase Active		02
Deactivation Timeout	100 to 25500 ms	OUT2	n
Active Level	Closed	OUL2	00
	Open		01

n = Hex value from **01** to **FF** representing the decimal number (*x100 ms*)

POWER SAVE			
Description		Parameter	Value
Sleep Mode Timeout	Disable	SLTO	00
	10 seconds		01
	30 seconds		02
	1 minute		03
	5 minutes		04
	10 minutes		05

	CODE SELECTION		
Description		Parameter	Value
Positive/Negative Background	Positive	CGRD	00
	Negative		01
	Both		02
UPC-A			
UPC-A	Disable	ABEN	00
	Enable		01
Check Character Tx	Disable	ABCT	00
	Enable		01
Expand to EAN-13	Disable	AB3B	00
•	Enable		01
Number System Tx	Disable	ABNS	00
,	Enable		01
Minimum Reads	One Read	ABMR	01
	Two Reads		02
	Three Reads		03
	Four Reads		04
Coupon Control	Allow all coupon barcodes to be decoded	CPCL	00
	Enable only UPC-A coupon decoding		01
	Enable only GS1 Databar coupon decoding		02
UPC-E		I	
UPC-F	Disable	EBEN	00
	Enable		01
Check Character Tx	Disable	FBCT	00
	Enable		01
Expand to UPC-A	Disable	FBAB	00
	Enable		01
Expand to EAN-13	Disable	EB3B	00
	Enable		01
Number System Tx	Disable	EBNS	00
	Enable		01
Minimum Reads	One Read	FBMR	01
	Two Reads	EBiiit	02
	Three Beads		02
	Four Reads		04
EAN-13			~
EAN-13	Disable	3BEN	00
	Enable	OBER	01
Check Character Tx	Disable	3BCT	00
	Enable		01
ISBN Conversion	Disable	3815	00
	Enable	5510	01
ISSN Conversion	Disable	3BIN	00
	Enable	5514	00
Flag 1 Character	Disable	3BF1	00
	Enable	3511	01
Minimum Poads		2PMP	01
Minimum Reads	Two Poodo	JBINK	02
	Three Deads		02
	Four Reads		03
Coupon Control	Allow all coupon barcodes to be decoded	CPCI	04
	Enable only LIPC A coupon decoding	UFUL	00
	Enable only OFC-A coupoil decoding		02
1	Linable only Go i Databal coupon decouling		02

	CODE SELECTION		
Description		Parameter	Value
EAN-8		· · · ·	
EAN-8	Disable	8BEN	00
	Enable		01
Check Character Tx	Disable	8BCT	00
	Enable		01
Expand to EAN-13	Disable	8B3B	00
-	Enable		01
Minimum Reads	One Read	8BMR	01
	Two Reads		02
	Three Reads		03
	Four Reads		04
Add-Ons			
P2 Add-On	Disable	ADO2	00
	Enable		01
P5 Add-On	Disable	ADO5	00
	Enable		01
P2 Minimum Reads	One Read	ADM2	01
	Two Reads		02
	Three Reads		03
	Four Reads		04
P5 Minimum Reads	One Read	ADM5	01
	Two Reads		02
	Three Reads		03
	Four Reads		04
Optional Add-On Timer	Timer disabled or from 10 to 300 ms	ADOT	р
EAN/UPC Global Settings			
GTIN Format	Disable	GBEN	00
	Enable		01
Decoding Level	Disable	UNDL	00
	Level 1		01
	Level 2		02
	Level 3		03
	Level 4		04
	Level 5		05
Character Correlation	Disable	UNCO	00
	Enable		01
In-Store Minimum Reads	One Read	INMR	01
	Two Reads		02
	Three Reads		03
	Four Reads		04

p = Hex value from 00 to 1E representing the decimal number (00 = Timer disabled; all others x10 ms)

	CODE SELECTION		
Description		Parameter	Value
Code 39			
Code 39	Disable	C3EN	00
	Enable		01
Code 39 Full ASCII	Disable	C3FA	00
	Enable		01
Code Length Control	Variable	C3LC	00
	Fixed		01
Set Length	Length 1 (or Min Length) from 1 to 50 characters	C3L1	q
	Length 2 (or Max Length) 0 or from 1 to 50 characters	C3L2	q
Code 32 (Italian Pharma)	Disable	P3EN	00
	Enable		01
Code 32 Check Tx	Disable	P3CT	00
	Enable		01
Code 32 Start/Stop Tx	Disable	P3SS	00
-	Enable		01
Check Options			
Check Calculation	Disable	C3CC	00
	Enable Standard Check		01
	Enable Mod-7 Check		02
	Enable Italian Post Check		04
	Enable Daimler Chrysler Check		08
Code 39 Check Tx	Disable	C3CT	00
	Enable		01
Code 39 Start/Stop Tx	Disable	C3SS	00
	Enable		01
Decoding Options		•	•
Minimum Reads	One Read	C3MR	01
	Two Reads		02
	Three Reads		03
	Four Reads		04
Decoding Level	Disable	C3DL	00
3	Level 1		01
	Level 2		02
	Level 3		03
	Level 4		04
	Level 5		05
Interdigit Ratio	Any ratio or 1 to 10	C3IR	r
Character Correlation	Disable	C3CO	00
	Enable		01
Quiet Zones	Quiet Zone on One Side	C3LO	01
	Quiet Zones on Two Sides		02
	Auto		03
	Virtual Quiet Zones on Two Sides		04
	Small Quiet Zones on Two Sides		05
Stitching	Disable	C3ST	00
	Enable		01

q = Hex value from **00** to **32** representing the decimal number

r = Hex value from 00 to 0A representing the decimal number of the interdigit space/module ratio (00 = any ratio)

	CODE SELECTION		
Description		Parameter	Value
Code 128 (GS1-128)			
Code 128	Disable	C8EN	00
	Enable		01
GS1-128 Enable	Enable (transmit labels in Code 128 data format)	U8EN	00
	Enable (transmit labels in GS1-128 data format)		01
	Disable		02
Code Length Control	Variable	C8LC	00
	Fixed		01
Set Length	Length 1 (or Min Length) from 1 to 80 characters	C8L1	S
	Length 2 (or Max Length) 0 or from 1 to 80 characters	C8L2	S
Expand to Code 39	Disable	C8C3	00
	Enable		01
Check Options			
Check Tx	Disable	C8CT	00
	Enable		01
Function Character Tx	Disable	C8TF	00
	Enable		01
Sub-Code Change Tx	Disable	C8SC	00
	Enable		01
Decoding Options			-
Minimum Reads	One Read	C8MR	01
	Two Reads		02
	Three Reads		03
	Four Reads		04
Decoding Level	Disable	C8DL	00
	Level 1		01
	Level 2		02
	Level 3		03
	Level 4		04
	Level 5		05
Character Correlation	Disable	C8CO	00
	Enable		01
Quiet Zones	No Quiet Zones	C8LO	00
	Quiet Zone on One Side		01
	Quiet Zones on Two Sides		02
	Auto		03
	Virtual Quiet Zones on Two Sides		04
Stitching	Disable	C8ST	00
	Enable		01
ISBI 128	Disable	10.05	
ISBI 128 Concatenation		ISCE	00
			01
Concatenation Mode	Static	I8CM	00
			01
Dynamic Concat. Timeout	From 50 to 2550 ms	I8DT	t
Chain 0 - Chain 15	I Contact Datalogic		

s = Hex value from 00 to 50 representing the decimal number

t = Hex value from **05** to **FF** representing the decimal number (*x10 ms*)

	CODE SELECTION		
Description		Parameter	Value
Interleaved 2 of 5 (I 2 of 5			
1 2 of 5	Disable	I2EN	00
	Enable		01
Code Length Control	Variable	I2LC	00
	Fixed		01
Set Length	Length 1 (or Min Length) from 2 to 50 characters (only even numbers)	I2L1	v
	Length 2 (or Max Length) from 0 or from 2 to 50 characters (only even	12L2	v
	numbers)		
Check Options			
Check Calculation	Disable	I2CC	00
	Enable Standard(Mod 10)		01
	Enable German Parcel		02
	Enable DHL		04
	Enable Daimler Chrysler		08
	Enable Bosch		10
	Enable Italian Post		20
Check Tx	Disable	I2CT	00
	Enable		01
Decoding Options			
Minimum Reads	One Read	I2MR	01
	Two Reads		02
	Three Reads		03
	Four Reads		04
Decoding Level	Disable	I2DL	00
	Level 1		01
	Level 2		02
	Level 3		03
	Level 4		04
	Level 5		05
Character Correlation	Disable	12CO	00
	Enable		01
Stitching	Disable	I2ST	00
-	Enable		01
Zero Pattern	Disable	I2ZP	00
	Enable		01
Standard 2 of 5			
Standard 2 of 5	Disable	S2EN	00
	Enable		01
Code Length Control	Variable	S2LC	00
Ũ	Fixed		01
Set Length	Length 1 (or Min Length) from 1 to 50 characters	S2L1	v
C C	Length 2 (or Max Length) 0 or from 1 to 50 characters	S2L2	v
Check Options			•
Check Calculation	Disable	S2CC	00
	Enable		01
Check Tx	Disable	S2CT	00
	Enable		01
Decoding Options			•
Minimum Reads	One Read	S2MR	01
	Two Reads		02
	Three Reads		03
	Four Reads		04
Decoding Level	Disable	S2DL	00
Ť	Level 1		01
	Level 2		02
	Level 3		03
	Level 4		04
	Level 5		05
Character Correlation	Disable	S2CO	00
	Enable		01
Stitching	Disable	S2ST	00
J	Enable		01

v = Hex value from 00 to 32 representing the decimal number

CODE SELECTION			
Description		Parameter	Value
Industrial 2 of 5			
Industrial 2 of 5	Disable	U2EN	00
	Enable		01
Code Length Control	Variable	U2LC	00
	Fixed		01
Set Length	Length 1 (or Min Length) from 1 to 50 characters	U2L1	v
	Length 2 (or Max Length) 0 or from 1 to 50 characters	U2L2	v
Check Options			
Check Calculation	Disable	U2CC	00
	Enable		01
Check Tx	Disable	U2CT	00
	Enable		01
Decoding Options			
Minimum Reads	One Read	U2MR	01
	Two Reads		02
	Three Reads		03
	Four Reads		04
Character Correlation	Disable	U2CO	00
	Enable		01
Stitching	Disable	U2ST	00
	Enable		01

v = Hex value from 00 to 32 representing the decimal number

CODE SELECTION			
Description		Parameter	Value
Codabar			
Codabar	Disable	CBEN	00
	Enable		01
Code Length Control	Variable	CBLC	00
	Fixed		01
Set Length	Length 1 (or Min Length) from 3 to 50 characters	CBL1	v
	Length 2 (or Max Length) 0 or from 3 to 50 characters	CBL2	v
ABC Codabar			
ABC Codabar	Disable	CBAB	00
	Enable		01
Concatenation Mode	Static	CBCM	00
	Dynamic		01
Dynamic Concat. Timeout	From 50 to 2550 ms	CBDT	t
Check Options			
Check Calculation	Disable	CBCC	00
	Enable AIM Standard Check		01
	Enable Mod-10 Check		02
Check Tx	Disable	CBCT	00
	Enable		01
Start/Stop Set	ABCD/TN*E	CBSC	00
	ABCD/ABCD		01
	abcd/tn*e		02
	abcd/abcd		03
Start/Stop Tx	Disable	CBSS	00
	Enable		01
Start/Stop Match	Disable	CBSM	00
	Enable		01

v = Hex value from 00 or 03 to 32 representing the decimal number

t = Hex value from **05** to **FF** representing the decimal number (*x10 ms*)

	CODE SELECTION		
Description		Parameter	Value
Decoding Options			
Minimum Reads	One Read	CBMR	01
	Two Reads		02
	Three Reads		03
	Four Reads		04
Decoding Level	Disable	CBDL	00
-	Level 1		01
	Level 2		02
	Level 3		03
	Level 4		04
	Level 5		05
Character Correlation	Disable	CBCO	00
	Enable		01
Interdigit Ratio	Any ratio or 1 to 10	CBIR	r
Quiet Zones	Quiet Zone on One Side	CBLO	01
	Quiet Zones on Two Sides		02
	Auto		03
	Virtual Quiet Zones on Two Sides		04
	Small Quiet Zones on Two Sides		05
Stitching	Disable	CBST	00
-	Enable		01

r = Hex value from 00 to 0A representing the decimal number of the interdigit space/module ratio (00 = any ratio)

CODE SELECTION			
Description		Parameter	Value
Code 11			
Code 11	Disable	C1EN	00
	Enable		01
Code Length Control	Variable	C1LC	00
	Fixed		01
Set Length	Length 1 (or Min Length) from 2 to 50 characters	C1L1	v
	Length 2 (or Max Length) 0 or from 2 to 50 characters	C1L2	v
Check Options			
Check Calculation	Disable	C1CC	00
	Enable Check C		01
	Enable Check K		02
	Enable Check C and K		03
Check Tx	Disable	C1CT	00
	Enable		01
Decoding Options			
Minimum Reads	One Read	C1MR	01
	Two Reads		02
	Three Reads		03
	Four Reads		04
Decoding Level	Disable	C1DL	00
	Level 1		01
	Level 2		02
	Level 3		03
	Level 4		04
	Level 5		05
Character Correlation	Disable	C1CO	00
	Enable		01
Interdigit Ratio	1 to 10	C1IR	r
Stitching	Disable	C1ST	00
	Enable		01

v = Hex value from **00** to **32** representing the decimal number

r = Hex value from 00 to 0A representing the decimal number of the interdigit space/module ratio (00 = any ratio)

	CODE SELECTION		
Description		Parameter	Value
GS1 Databar Omnidirectional			
GS1 Databar Omnidirectional	Disable	4BEN	00
	Enable	_	01
GS1-128 Emulation	Disable	4BU8	00
	Enable		01
Omnidirectional Decoding Option	IS		
Minimum Reads	One Read	4BMR	01
	Two Reads		02
	Three Reads		03
	Four Reads		04
GS1 Databar Expanded			
GS1 Databar Expanded	Disable	XBEN	00
	Enable		01
GS1-128 Emulation	Disable	XBU8	00
	Enable		01
Code Length Control	Variable	XBLC	00
	Fixed		01
Set Length	Length 1 (or Min Length) from 1 to 74 characters	XBL1	W
	Length 2 (or Max Length) 0 or from 1 to 74 characters	XBL2	W
Expanded Decoding Options			-
Minimum Reads	One Read	XBMR	01
	Two Reads		02
	Three Reads		03
	Four Reads		04
Coupon Control	Allow all coupon barcodes to be decoded	CPCL	00
	Enable only UPC-A coupon decoding		01
	Enable only GS1 Databar coupon decoding		02
GS1 Databar Limited			
GS1 Databar Limited	Disable	LBEN	00
	Enable		01
GS1-128 Emulation	Disable	LBU8	00
	Enable		01
GS1 Databar Limited (continued			
Limited Decoding Options			
Minimum Reads	One Read	LBMR	01
	Two Reads		02
	Three Reads		03
	Four Reads		04
Code 93		1	
Code 93	Disable	C9EN	00
	Enable		01
Code Length Control	Variable	C9LC	00
	Fixed		01
Set Length	Length 1 (or Min Length) from 1 to 50 characters	C9L1	v
	Length 2 (or Max Length) 0 or from 1 to 50 characters	C9L2	v
Check Options			
Check Calculation	Disable	C9CC	00
	Enable Check C	_	01
	Enable Check K	_	02
	Enable Check C and K	-	03
Check Tx	Disable	С9СТ	00
	Enable		01

w = Hex value from 00 to 4A representing the decimal number

v = Hex value from 00 to 32 representing the decimal number

	CODE SELECTION		
Description		Parameter	Value
Decoding Options			
Minimum Reads	One Read	C9MR	01
	Two Reads		02
	Three Reads		03
	Four Reads		04
Decoding Level	Disable	C9DL	00
-	Level 1		01
	Level 2		02
	Level 3		03
	Level 4		04
	Level 5		05
Character Correlation	Disable	C9CO	00
	Enable		01
Quiet Zones	No Quiet Zones	C9LO	00
	Quiet Zone on One Side		01
	Quiet Zones on Two Sides		02
	Auto		03
	Virtual Quiet Zones on Two Sides		04
Stitching	Disable	C9ST	00
	Enable		01

CODE SELECTION			
Description		Parameter	Value
MSI			
MSI	Disable	MSEN	00
	Enable		01
Code Length Control	Variable	MSLC	00
	Fixed		01
Set Length	Length 1 (or Min Length) from 1 to 50 characters	MSL1	v
	Length 2 (or Max Length) 0 or from 1 to 50 characters	MSL2	v
Check Options			
Check Calculation	Disable	MSCC	00
	Enable Mod 10		01
	Enable Mod 11/10		02
	Enable Mod 10/10		03
Check Tx	Disable	MSCT	00
	Enable		01
Decoding Options			
Minimum Reads	One Read	MSMR	01
	Two Reads		02
	Three Reads		03
	Four Reads		04
Decoding Level	Disable	MSDL	00
	Level 1		01
	Level 2		02
	Level 3		03
	Level 4		04
	Level 5		05
Stitching	Disable	MSST	00
	Enable		01

v = Hex value from 00 to 32 representing the decimal number

	CODE SELECTION		
Description		Parameter	Value
Plessey		·	
Plessey	Disable	PLEN	00
	Enable		01
Code Length Control	Variable	PLLC	00
_	Fixed		01
Set Length	Length 1 (or Min Length) from 1 to 50 characters	PLL1	v
	Length 2 (or Max Length) 0 or from 1 to 50 characters	PLL2	v
Check Options			
Check Calculation	Disable	PLCC	00
	Plessey Standard Check		01
	Anker Check		02
Check Tx	Disable	PLCT	00
	Enable		01
Decoding Options			
Minimum Reads	One Read	PLMR	01
	Two Reads		02
	Three Reads		03
	Four Reads		04
Decoding Level	Disable	PLDL	00
	Level 1		01
	Level 2		02
	Level 3		03
	Level 4		04
	Level 5		05
Character Correlation	Disable	PLCO	00
	Enable		01
Stitching	Disable	PLST	00
1	Enable		01

v = Hex value from **00** to **32** representing the decimal number

4 BARCODE CONFIGURATION

An alternative configuration method for your TC1200 is by reading configuration barcodes.

4.1 INITIAL SETUP

The following procedure prepares your TC1200 to read barcodes using the default settings.

For TC1200 Scanner models just press the Trigger button to read a code.



RESTORE DEFAULT

1. Read the restore factory default parameters code below.

Restore TC1200 Current Interface (Custom) Default



INTERFACE SELECTION

2. Read the interface selection code for your application.

Only RS232 Models



4

Only USB Models









YOUR READER IS NOW READY TO READ BARCODES.

To change the default settings see par. 4.2.

4.2 CHANGING DEFAULT SETTINGS

Once your reader is setup, you can change the default parameters to meet your application needs. Refer to the preceding paragraph for initial configuration in order to set the default values and select the interface for your application.

In this manual, the configuration parameters are divided into logical groups making it easy to find the desired function based on its reference group.

The first three groups are for Standard Interface parameter configuration:

• RS232

Δ

- RS232/USB-COM
- USB-KBD

The following parameter groups are common to all interface applications:

READING PARAMETERS control various operating modes and indicator status functioning.

DATA FORMAT parameters regard the messages sent to the Host system for all interfaces.

DIGITAL OUTPUTS manage the events controlling the two digital outputs. (RS232 models only)

POWER SAVE manages overall current consumption in the reading device.

CODE SELECTION parameters allow configuration of a personalized mix of codes, code families and their options.



GLOBAL INTERFACE FEATURES





RS232

\odot	BAUD RATE	ullet
\odot	PARITY	C
\odot	DATA BITS	\overline{ullet}
\odot	STOP BITS	C

- **1.** Read the **Enter**/Exit **Configuration** code <u>ONCE</u>, available at the top of each page.
- **2.** Read configuration codes from the desired groups.



- = Read the code and follow the procedure on the indicated reference page
- = Default value
- **3.** Read the Enter/**Exit Configuration** code <u>ONCE</u>, available at the top of each page.



RS232

BAUD RATE

















PARITY







RS232

DATA BITS





STOP BITS

◆ 1 stop bit



RS232/USB-COM

 DISABLE CHARACTER ENABLE CHARACTER ACK/NAK OPTIONS ACK CHARACTER NAK CHARACTER ACK/NAK TIMEOUT ACK/NAK RETRY COUNT ACK/NAK ERROR HANDLING 	$\overline{\mathbf{O}}$
 ENABLE CHARACTER ACK/NAK OPTIONS ACK CHARACTER NAK CHARACTER ACK/NAK TIMEOUT ACK/NAK RETRY COUNT ACK/NAK ERROR HANDLING 	C
 ACK/NAK OPTIONS ACK CHARACTER NAK CHARACTER ACK/NAK TIMEOUT ACK/NAK RETRY COUNT ACK/NAK ERROR HANDLING 	O
 ACK CHARACTER NAK CHARACTER ACK/NAK TIMEOUT ACK/NAK RETRY COUNT ACK/NAK ERROR HANDLING 	O
 NAK CHARACTER ACK/NAK TIMEOUT ACK/NAK RETRY COUNT ACK/NAK ERROR HANDLING 	C
 ACK/NAK TIMEOUT ACK/NAK RETRY COUNT ACK/NAK ERROR HANDLING 	O
 ACK/NAK RETRY COUNT ACK/NAK ERROR HANDLING 	O
• ACK/NAK ERROR HANDLING	O
	O

- **1.** Read the **Enter**/Exit **Configuration** code <u>ONCE</u>, available at the top of each page.
- **2.** Read configuration codes from the desired groups.



3. Read the Enter/**Exit Configuration** code <u>ONCE</u>, available at the top of each page.

Enter/Exit Configuration

INTERCHARACTER DELAY







DISABLE CHARACTER

Select Device Disable Character



ENABLE CHARACTER

Select Device Enable Character



ACK/NAK OPTIONS



Enable For Host Command Acknowledge



Enable For Label Transmission And Host Command Acknowledge

ACK CHARACTER







NAK CHARACTER



See page 131

ACK/NAK TIMEOUT







ACK/NAK RETRY COUNT





ACK/NAK ERROR HANDLING



Process Errors As Valid ACK Character



USB-KBD

\odot	Keyboard Country	\odot
•	CAPS LOCK	\odot
•	Num Lock	\odot
•	INTER-CHARACTER DELAY	\odot
•	INTER-CODE DELAY	\odot
•	Keyboard Setting	\odot
•	CONTROL CHARACTER EMULATION	\odot

- **1.** Read the **Enter**/Exit **Configuration** code <u>ONCE</u>, available at the top of each page.
- **2.** Read configuration codes from the desired groups.
 - = Read the code and follow the procedure on the indicated reference page
 - = Default value
- **3.** Read the Enter/Exit Configuration code <u>ONCE</u>, available at the top of each page.



USB-KBD

KEYBOARD COUNTRY











Japanese (106 key)

















Keyboard Country (continued)















Keyboard Intercode Delay









USB-KBD

SEND CONTROL CHARACTERS







USB KEYBOARD SPEED

















USB-KBD



USB KEYBOARD SPEED (CONTINUED)





READING PARAMETERS

\odot	ILLUMINATION MODE	\odot
\odot	OPERATING MODE	\odot
\odot	AUTOMATIC THRESHOLD	\odot
\odot	PHASE OFF EVENT	\odot
\odot	ΤιΜΕΟυΤ	\odot
\odot	SERIAL START	\odot
\odot	SERIAL STOP	\odot
\odot	LED INDICATION	\odot
\odot	LABEL PROGRAMMING MODE	\odot
\odot	Exposure Mode	\odot
\odot	READING CONDITIONS	\odot

- **1.** Read the **Enter**/Exit **Configuration** code <u>ONCE</u>, available at the top of each page.
- **2.** Read configuration codes from the desired groups.



- = Default value
- **3.** Read the Enter/Exit Configuration code <u>ONCE</u>, available at the top of each page.

READING PARAMETERS

Enter/Exit Configuration

ILLUMINATION MODE







OPERATING MODE











AUTOMATIC THRESHOLD



See page 134



PHASE OFF EVENT







Тімеоит





SERIAL START





SERIAL STOP





LED INDICATION







LABEL PROGRAMMING MODE





EXPOSURE MODE





READING CONDITIONS











DATA FORMAT

\odot	DATA TRANSMISSION	C
\odot	Code Verifier Mode	C
\odot	MATCH STRING	C
\odot	WRONG CODE STRING	C
\odot	CASE CONVERSION	C
\odot	GLOBAL PREFIX	C
\odot	GLOBAL SUFFIX	C
\odot	NO READ STRING	C
\odot	TRANSMIT AIM IDS	C
\odot	TRANSMIT CUSTOM LABEL IDS	C
\odot	CUSTOM LABEL IDS	C

- **1.** Read the **Enter**/Exit **Configuration** code <u>ONCE</u>, available at the top of each page.
- **2.** Read configuration codes from the desired groups.



- = Default value
- **3.** Read the Enter/Exit Configuration code <u>ONCE</u>, available at the top of each page.

DATA FORMAT

Enter/Exit Configuration

DATA TRANSMISSION





CODE VERIFIER MODE







MATCH STRING





WRONG CODE STRING






CASE CONVERSION

Disable (no case conversion)





GLOBAL PREFIX

Select Global Prefix (Header)



GLOBAL SUFFIX

Select Global Suffix (Terminator)





NO READ STRING







TRANSMIT AIM IDS





TRANSMIT CUSTOM LABEL IDS







CUSTOM LABEL IDENTIFIERS





















CUSTOM LABEL IDENTIFIERS (CONTINUED)

Set UPC-A/P2 Label ID(s)









See page 142



See page 142

See page 142





See page 142

See page 142

See page 142



Set UPC-A/P5 Label ID(s)



Set E	AN	·8/P5	Labe	el ID(s)













Set Interleaved 2 of 5 Label ID(s)

Set Codabar Label ID(s)

See page 142





See page 142

See page 142

See page 142







Set GTIN Label ID(s) for EAN/UPC





Set (Code	128 I	Label	ID(s)









CUSTOM CODE IDENTIFIERS (CONTINUED)

Set Code 11 Label ID(s)

Set Label ID(s) for GS1 Databar Expanded



See page 142







Set Label ID(s) for GS1 Databar 14 (Omnidirectional)









DIGITAL OUTPUTS

\odot	OUTPUT 1 ACTIVATION EVENT	\odot
\odot	OUTPUT 1 DEACTIVATION EVENT	\odot
•	OUTPUT 1 DEACTIVATION TIMEOUT	\odot
\odot	OUTPUT 1 ACTIVE LEVEL	\odot
\odot	OUTPUT 2 ACTIVATION EVENT	\odot
•	OUTPUT 2 DEACTIVATION EVENT	\odot
\odot	OUTPUT 2 DEACTIVATION TIMEOUT	\odot
\odot	OUTPUT 2 ACTIVE LEVEL	\odot

- **1.** Read the **Enter**/Exit **Configuration** code <u>ONCE</u>, available at the top of each page.
- **2.** Read configuration codes from the desired groups.



- E Default value
- **3.** Read the Enter/Exit Configuration code <u>ONCE</u>, available at the top of each page.



DIGITAL OUTPUTS

OUTPUT 1 ACTIVATION EVENT









OUTPUT 1 DEACTIVATION EVENT







OUTPUT 1 DEACTIVATION TIMEOUT

Set Deactivation Timeout



OUTPUT 1 ACTIVATION EVENT





DIGITAL OUTPUTS

Enter/Exit Configuration

OUTPUT 2 ACTIVATION EVENT









OUTPUT 2 DEACTIVATION EVENT







OUTPUT 2 DEACTIVATION TIMEOUT

Set Deactivation Timeout



OUTPUT 2 ACTIVATION EVENT





POWER SAVE

 \odot

SLEEP MODE TIMEOUT

 \odot

- **1.** Read the **Enter**/Exit **Configuration** code <u>ONCE</u>, available at the top of each page.
- **2.** Read configuration codes from the desired groups.
 - = Read the code and follow the procedure on the indicated reference page
 - = Default value
- **3.** Read the Enter/Exit Configuration code <u>ONCE</u>, available at the top of each page.

POWER SAVE



SLEEP MODE TIMEOUT













•	Positive/Negative Background	\odot
•	EAN/UPC	\odot
•	CODE 39 (CODE 32)	\odot
•	CODE 128 (GS1-128, ISBT 128)	\odot
•	INTERLEAVED 2 OF 5	\odot
•	STANDARD 2 OF 5	\odot
•	INDUSTRIAL 2 OF 5	\odot
•	CODABAR (ABC CODABAR)	\odot
•	CODE 11	\odot
•	GS1 DATABAR (OMNIDIRECTIONAL, EXPANDED, LIMITED)	\odot
•	C ODE 93	\odot
•	MSI	\odot
$oldsymbol{\circ}$	PLESSEY	\odot

- **1.** Read the **Enter**/Exit **Configuration** code <u>ONCE</u>, available at the top of each page.
- **2.** Read configuration codes from the desired groups.

= Read the code and follow the procedure on the indicated reference page

- = Default value
- **3.** Read the Enter/Exit Configuration code <u>ONCE</u>, available at the top of each page.



DISABLE ALL CODE SYMBOLOGIES

Use this feature to disable all symbologies.

- 1. Scan the ENTER/EXIT PROGRAMMING barcode above.
- 2. Scan the Disable All Symbologies barcode.
- 3. Complete the programming sequence by re-scanning the ENTER/EXIT PROGRAMMING barcode above.



POSITIVE / NEGATIVE BACKGROUND









UPC-A





CHECK CHARACTER TX





EXPAND TO EAN-13





NUMBER SYSTEM TX







UPC-A MINIMUM READS









COUPON CONTROL

Allow All Coupon Barcodes to be Decoded

Enable Only GS1 Databar Coupon Decoding





UPC-E





CHECK CHARACTER TX





EXPAND TO UPC-A





EXPAND TO EAN-13







NUMBER SYSTEM TX





UPC-E MINIMUM READS

One Read









EAN-13





CHECK CHARACTER TX





ISBN CONVERSION





ISSN CONVERSION







FLAG 1 CHARACTER





EAN-13 MINIMUM READS









COUPON CONTROL

Allow All Coupon Barcodes to be Decoded



Enable Only GS1 Databar Coupon Decoding Enable Only UPC-A Coupon Decoding



EAN-8





CHECK CHARACTER TX





EXPAND TO EAN-13





EAN-8 MINIMUM READS











ENABLE OPTIONAL P2 ADD-ON





ENABLE OPTIONAL P5 ADD-ON





P2 MINIMUM READS











P5 MINIMUM READS









OPTIONAL ADD-ON TIMER









GTIN FORMAT





DECODING LEVEL

Disable











CHARACTER CORRELATION







IN-STORE MINIMUM READS









CODE **39**





CODE 39 FULL ASCII





CODE LENGTH CONTROL





Enter/Exit Configuration



Set Length







CODE 39 CHECK TX





CODE 39 START/STOP TX







CODE 32 (ITALIAN PHARMACEUTICAL)





CODE 32 CHECK TX





CODE 32 START/STOP TX







Code 39 Check Options

CHECK CALCULATION











Code 39 Decoding Options

MINIMUM READS











Decoding Level













CHARACTER CORRELATION





INTERDIGIT RATIO









QUIET ZONES













STITCHING







CODE 128





GS1-128 ENABLE



Enable GS1-128 (Transmit Labels in GS1-128 Data Format)



CODE LENGTH CONTROL







SET LENGTH







Enter/Exit Configuration

EXPAND TO CODE 39





Code 128 Check Options

Снеск Тх





FUNCTION CHARACTER TX





SUB-CODE CHANGE TX







Code 128 Decoding Options

MINIMUM READS









DECODING LEVEL







Level 4





Enter/Exit Configuration

CHARACTER CORRELATION





QUIET ZONES

No Quiet Zones







Virtual Quiet Zones on Two Sides

STITCHING







ISBT 128 CONCATENATION





CONCATENATION MODE





DYNAMIC CONCATENATION TIMEOUT





Enter/Exit Configuration

INTERLEAVED 2 OF 5





CODE LENGTH CONTROL





SET LENGTH



See page 149







Interleaved 2 of 5 Check Options

CHECK CALCULATION









Enable Bosch Check



Enable Italian Post Check

Снеск Тх







Interleaved 2 of 5 Decoding Options

MINIMUM READS









DECODING LEVEL














CHARACTER CORRELATION





STITCHING





ZERO PATTERN







STANDARD 2 OF 5





CODE LENGTH CONTROL





SET LENGTH









Standard 2 of 5 Check Options

CHECK CALCULATION







Снеск Тх





Standard 2 of 5 Decoding Options

MINIMUM READS









Enter/Exit Configuration

DECODING LEVEL













CHARACTER CORRELATION





STITCHING







INDUSTRIAL 2 OF 5





CODE LENGTH CONTROL





Set Length











Industrial 2 of 5 Check Options

CHECK CALCULATION





Снеск Тх







Industrial 2 of 5 Decoding Options

MINIMUM READS









CHARACTER CORRELATION





STITCHING







CODABAR





CODE LENGTH CONTROL





SET LENGTH











CODABAR ABC





CONCATENATION MODE





DYNAMIC CONCATENATION TIMEOUT







Codabar Check Options

CHECK CALCULATION







Снеск Тх





START/STOP SET











START/STOP TX





START/STOP MATCH





Codabar Decoding Options

MINIMUM READS









Enter/Exit Configuration

DECODING LEVEL













CHARACTER CORRELATION





INTERDIGIT RATIO









QUIET ZONES











STITCHING







CODE **11**





CODE LENGTH CONTROL





SET LENGTH



See page 149







Code 11 Check Options

CHECK CALCULATION









Снеск Тх







Code 11 Decoding Options

MINIMUM READS









DECODING LEVEL















CHARACTER CORRELATION





INTERDIGIT RATIO







STITCHING





Enter/Exit Configuration

GS1 DATABAR OMNIDIRECTIONAL





GS1 DATABAR OMNIDIRECTIONAL GS1-128 EMULATION





MINIMUM READS











GS1 DATABAR EXPANDED





GS1 DATABAR EXPANDED GS1-128 EMULATION





CODE LENGTH CONTROL





Set Length 1 (or Minimum Length) SET LENGTH









GS1 DataBar Expanded Decoding Options

MINIMUM READS









COUPON CONTROL

Allow All Coupon Barcodes to be Decoded



Enable Only GS1 Databar Coupon Decoding



GS1 DATABAR LIMITED





GS1 DATABAR LIMITED GS1-128 EMULATION





MINIMUM READS











CODE 93





CODE LENGTH CONTROL





SET LENGTH



See page 149







Code 93 Check Options

CHECK CALCULATION



Enable Check K





Снеск Тх







Code 93 Decoding Options

MINIMUM READS









DECODING LEVEL















CHARACTER CORRELATION





QUIET ZONES

No Quiet Zones







Virtual Quiet Zones on Two Sides

STITCHING







MSI





CODE LENGTH CONTROL





SET LENGTH



See page 149







MSI Check Options

CHECK CALCULATION









Снеск Тх







MSI Decoding Options

MINIMUM READS









DECODING LEVEL















S*T***I***T***C***H***I***N***G**





PLESSEY





CODE LENGTH CONTROL





Set Length 1 (or Minimum Length) SET LENGTH









Plessey Check Options

CHECK CALCULATION







Снеск Тх





Plessey Decoding Options

MINIMUM READS











Decoding Level













CHARACTER CORRELATION





STITCHING





5 PARAMETER REFERENCES

5.1 RS232 PARAMETERS

This section contains explanations and examples of selected barcode features. See the Configuration section for the actual barcode labels used to configure the reader.

5.1.1 RS232 Only

Baud Rate

Baud rate is the number of bits of data transmitted per second. Set the reader's baud rate to match the baud rate setting of the host device. With an improper baud rate setting, data may not reach the host correctly.

Stop Bits

The stop bit(s) at the end of each transmitted character marks the end of transmission of one character and prepares the receiving device for the next character in the serial data stream. The number of stop bits selected (one or two) depends on the number the receiving terminal is programmed to accommodate. Set the number of stop bits to match host device requirements.

Parity

This feature specifies parity required for sending and receiving data. A parity check bit is the most significant bit of each ASCII coded character. Select the parity type according to host device requirements.

- Select None when no parity bit is required.
- Select Odd parity and the parity bit value is set to 0 or 1, based on data, to ensure that an odd number of 1 bits are contained in the coded character.
- Select Even parity and the parity bit value is set to 0 or 1, based on data, to ensure that an even number of 1 bits are contained in the coded character.

128

5.1.2 RS232/USB COM Parameters

Intercharacter Delay

This parameter specifies the intercharacter delay between the end of one character and the beginning of the next. The delay can be set within a range of zero (0) to 990 milliseconds in 10 ms increments. A setting of zero specifies no delay.

To set the delay:

- 1. Determine the desired setting in milliseconds (x 10 ms). (0-99).
- 2. Use the Chart in Appendix C to find the <u>hex equivalent</u> for the desired numeric value.
- 3. Go to page 48 and scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SELECT INTERCHARACTER DELAY.
- 5. Scan the two <u>hex equivalent characters</u> from the keypad in Appendix B that represent the numeric value determined in step 1 above.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit.

This completes the procedure.

Disable Character

Specifies the value of the RS232 host command used to disable the reader. Selections: a character from NUL (0x00) to DEL (0x7F).



The Enable Character must be different from the Disable Character and must not contain reserved characters (see Appendix D). Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option Data Bits has been set as 7 Data Bits.

To set the value:

- 1. Determine the desired character. A setting of 0xFF indicates the Disable Character is not used (not available).
- 2. Use the Chart in Appendix C to find the <u>hex equivalent</u> for the desired character.
- 3. Go to page 48 and scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SELECT DEVICE DISABLE CHARACTER.
- 5. Scan the two <u>hex equivalent characters</u> from the keypad in Appendix B that represent the desired character in step 1 above.
- 6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.

5

Enable Character

Specifies the value of the RS232 host command used to enable the reader. Selections: a character from NUL (0x00) to DEL (0x7F).



The Enable Character must be different from the Disable Character and must not contain reserved characters (see Appendix D). Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option Data Bits has been set as 7 Data Bits.

To set this feature:

- 1. Determine the desired character. A setting of 0xFF indicates the Enable Character is not used (not available).
- 2. Use the Chart in Appendix C to find the hex equivalent for the desired character.
- 3. Go to page 48 and scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SELECT DEVICE ENABLE CHARACTER.
- 5. Scan the two <u>hex equivalent characters</u> from the keypad in Appendix B that represent the desired character in step 1 above.
- 6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.

ACK NAK Options

This enables/disables the ability of the reader to support the RS232 ACK/NAK protocol. When configured, the reader and/or host sends an "ACK" when it receives data properly, and sends "NAK" when the data is in error.

Options are:

- Disable
- Enable for label transmission The reader expects an ACK/NAK response from the host when a label is sent.
- Enable for host-command acknowledge The reader will respond with ACK/NAK when the host sends a command.
- Enable for label transmission and host-command acknowledge

ACK Character

This setting specifies an ASCII character to be used as the ACK character. Selections: a character from NUL (0x00) to DEL (0x7F).



The ACK Character must be different from the NAK Character and must not contain reserved characters (see Appendix D). Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option Data Bits has been set as 7 Data Bits.

To set this feature:

- 1. Determine the desired character.
- 2. Use the Chart in Appendix C to find the <u>hex equivalent</u> for the desired character.
- 3. Go to page 48 and scan the ENTER/EXIT PROGRAMMING MODE to enter Programming Mode.
- 4. Scan the barcode: SELECT ACK CHARACTER.
- 5. Scan the two <u>hex equivalent characters</u> from the keypad in Appendix B that represent the desired character in step 1 above.
- 6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.

NAK Character

This setting specifies an ASCII character to be used as the NAK character. Selections: a character from NUL (0x00) to DEL (0x7F).



The ACK Character must be different from the NAK Character and must not contain reserved characters (see Appendix D). Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option Data Bits has been set as 7 Data Bits.

To set this feature:

- 1. Determine the desired character.
- 2. Use the Chart in Appendix C to find the hex equivalent for the desired character.
- 3. Go to page 49 and scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SELECT NAK CHARACTER.
- 5. Scan the two <u>hex equivalent characters</u> from the keypad in Appendix B that represent the desired character in step 1 above.
- 6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.

ACK NAK Timeout Value

This option specifies the amount of time the reader waits for an ACK character from the host following label transmission. The selectable timeout range is 200 ms to 15,000 ms (15 seconds) in 200 ms increments. A selection of 0 disables the timeout.

To set this value:

- 1. Determine the desired setting in milliseconds (x 200 ms). (0-75).
- 2. Use the Chart in Appendix C to find the <u>hex equivalent</u> for the desired numeric value.
- 3. Go to page 49 and scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SELECT ACK NAK TIMEOUT VALUE.
- 5. Scan the two <u>hex equivalent characters</u> from the keypad in Appendix B that represent the numeric value determined in step 1 above.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.

ACK NAK Retry Count

This feature specifies the number of times the reader retries a label transmission due to a retry condition. The selectable range is from 1 to 254 retries. A selection of 0 disables the count (no retries), and a selection of 255 specifies unlimited retries.

To set this feature:

- 1. Determine the desired number of retries. (0-255).
- 2. Use the Chart in Appendix C to find the <u>hex equivalent</u> for the desired numeric value.
- 3. Go to page 49 and scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SELECT ACK NAK RETRY COUNT.
- 5. Scan the two <u>hex equivalent characters</u> from the keypad in Appendix B that represent the numeric value determined in step 1 above.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.
Keyboard Intercode Delay

This parameter specifies the intercode delay between the end of one code and the beginning of the next. The delay can be set within a range of zero (0) to 99 seconds in 1 second increments. A setting of zero specifies no delay.

To set the delay:

- 1. Determine the desired setting in seconds. (0-99).
- 2. Use the Chart in Appendix C to find the <u>hex equivalent</u> for the desired numeric value.
- 3. Go to page 52 and scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SELECT INTERCODE DELAY.
- 5. Scan the two <u>hex equivalent characters</u> from the keypad in Appendix B that represent the numeric value determined in step 1 above.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit.

This completes the procedure.

5.2 READING PARAMETERS

5.2.1 Illumination Mode

Illumination Mode

Selects the illumination mode for the reader. The illumination mode can be used to:

- to increase the overall diode life
- to reduce power consumption;
- to turn off the illuminator for safety purposes.

Selections:

Disabled: the illuminator is always off.

Enabled: the illuminator is always on.

Triggered: the illuminator is turned on when the reading phase starts. The illuminator is turned off as soon as the code(s) are read or when the reading phase ends.



The Triggered selection is ignored for Automatic and Test Operating Modes.

5.2.2 Operating Mode

Operating Mode

Selects the scan operating mode for the reader. Selections:

On Line: the reading phase is defined as the time between the Phase ON and Phase OFF events. The Phase events can be signals coming from the trigger button (or external presence sensor connected to the scanner input for RS232 models).

Serial On Line: the reading phase is defined as the time between the Phase ON and Phase OFF events. The Phase events are serial start/stop strings sent from the host over the serial interface.

Automatic: The device does not require connections with external presence sensors in this operating mode. In this mode the scanner is continuously scanning. The reading phase is enabled when a barcode enters the reading zone of the scanner and is terminated after an N number of scans without a code, where N is set using the Automatic Threshold selection. The next reading phase will begin when a code enters the reading zone of the scanner again. The N number of scans without a code must be selected to assure code identification in the reading zone. Code transmission is identical to the other operating modes except that there is no transmission on the serial port in the case of a No Read condition.

Automatic (Object Sense): The reader is normally in the Object Sense state (a low power/ready-to-read condition). When an item is automatically detected in the reader's field of view, the Automatic operating mode is turned on. The Automatic Threshold assures code identification. When objects are no longer present in the reading field, the Timeout ends Automatic mode and returns the reader to the Object Sense state.

Test: The Test mode reports information about the reading performance of the scanner and the code is continuously read. After 100 scans, the following information is transmitted on the serial interface:

- the code content
- percentage of good reads (if the good read percentage is 0 no transmission is done)

The information can be displayed on the Host PC by running a terminal emulator program (ex. Hyper Terminal). The output data format is fixed.

Automatic Threshold

For Automatic operating modes, the Automatic Threshold sets an N number of scans without a code in order to assure code identification in the reading zone. Selection: a value from 2 to 255.

To set this value:

- 1. Determine the desired number of reads. (2-255).
- 2. Use the Chart in Appendix C to find the <u>hex equivalent</u> for the desired numeric value.
- 3. Go to page 56 and scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SELECT AUTOMATIC THRESHOLD VALUE.

5. Scan the two <u>hex equivalent characters</u> from the keypad in Appendix B that represent the numeric value determined in step 1 above.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.

Phase Off Event

This parameter determines how the reading phase is concluded for On Line and Serial On Line modes:

Trigger Stop: the reading phase ends only when a Stop Input or Serial Stop String is received; the Timeout is disabled.

Timeout: the reading phase ends only when the Timeout expires; Stop Input or Serial Stop Strings are ignored.

Trigger Stop-Timeout: the Stop Input or Serial Stop Strings define the end of the reading phase. If no Stop Input or Serial Stop String is received then the Timeout ends the reading phase.

Timeout

Determines the Timeout for a Phase Off Event or Automatic Object Sense state as follows.

For On Line and Serial On Line modes, it defines a timeout which determines the maximum length of the reading phase depending on the Phase Off Event selection.

For Automatic (Object Sense) mode, it defines a timeout which allows the reader to return to the Object Sense state after objects are no longer present in the reading field.

Selections: from 40 to 5100 ms in 20 ms increments.

To set this value:

- 1. Determine the desired setting in milliseconds (x 20 ms). (2-255).
- 2. Use the Chart in Appendix C to find the <u>hex equivalent</u> for the desired numeric value.
- 3. Go to page 57 and scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SELECT TIMEOUT VALUE.
- 5. Scan the two <u>hex equivalent characters</u> from the keypad in Appendix B that represent the numeric value determined in step 1 above.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.

Serial Start

The Serial Start string (max 20 characters), signals the beginning of the reading phase. Selections: characters from NUL (0x00) to \sim (0x7E).



The Serial Start Character must be different from the Serial Stop Character and must not contain reserved characters (see Appendix D). Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option Data Bits has been set as 7 Data Bits.

To set this feature:

- 1. Determine the desired character string (max 20).
- 2. Use the Chart in Appendix C to find the <u>hex equivalent(s)</u> for the desired character(s).
- 3. Go to page 57 and scan ENTER/EXIT PROGRAMMING MODE to enter Programming Mode.
- 4. Scan the barcode: SELECT SERIAL START CHARACTERS.
- 5. Scan the <u>hex equivalent characters</u> from the keypad in Appendix B that represent the desired character string in step 1 above.
- 6. If less than the expected string of 20 characters are selected, scan the ENTER/EXIT barcode to terminate the string.
- 7. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.

Serial Stop

The Serial Stop string (max 20 characters), signals the end of the reading phase. Selections: characters from NUL (0x00) to \sim (0x7E).



The Serial Start Character must be different from the Serial Stop Character and must not contain reserved characters (see Appendix D). Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option Data Bits has been set as 7 Data Bits.

To set this feature:

- 1. Determine the desired character string (max 20).
- 2. Use the Chart in Appendix C to find the <u>hex equivalent(s)</u> for the desired character(s).
- 3. Go to page 57 and scan ENTER/EXIT PROGRAMMING MODE to enter Programming Mode.
- 4. Scan the barcode: SELECT SERIAL STOP CHARACTERS.
- 5. Scan the <u>hex equivalent characters</u> from the keypad in Appendix B that represent the desired character string in step 1 above.

- 6. If less than the expected string of 20 characters are selected, scan the ENTER/EXIT barcode to terminate the string.
- 7. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.

5.2.3 Good Read LED

LED Indication

Specifies when the scanner will provide indication upon successfully reading a barcode. Selections:

On Decode = Indicate Good Read immediately after decoding.

After Transmission = Indicate Good Read after code transmission towards host.

5.2.4 Exposure Mode

This parameter allows controlling the lighting system for correct exposure according to the specific application. The lighting system can be set to low power (Continuous) or to high power (Strobed) lighting. Continuous lighting (default) is used for stopped or slow motion code reading applications.

When set to Strobed, the scanner controls the camera parameters dynamically in order to guarantee the best performance with high speed applications and low (or dark) external light conditions.

5.2.5 Preset Recipes

Reading Conditions

This parameter allows selecting various predefined "recipes" (combinations of internal component settings) to optimize the scanner to read under specific application conditions.

Auto: this is the default setting which cycles through all the predefined recipes attempting to find the best reading condition.

Standard: this setting is best for good quality codes at low resolutions.

High Resolution (Far): this optimizes reading for either high resolution codes or for codes located at the far end of the reading range for the given code resolution.

Difficult: optimizes low contrast code reading.

Blurred (Near): optimizes reading out of focus codes or codes located at the near end of the reading range for the given code resolution.

5.3 DATA FORMATTING

When a barcode is scanned, additional information can be sent to the host computer along with the barcode data. This combination of barcode data and supplementary user-defined data is called a "message string." The Data Editing features can be used to build specific user-defined data into a message string.

There are several types of selectable data characters that can be sent before and after scanned data. You can specify if they should be sent with all symbologies, or only with specific symbologies. The figure below shows the available elements you can add to a message string:



Figure 13 - Breakdown of a Message String



Additional advanced formatting is available. See the Advanced Formatting features in the Datalogic Aladdin[™] configuration software.

Please Keep In Mind...

- Modifying a message string is not a mandatory requirement. Data editing is a sophisticated feature allowing highly customizable output for advanced users. Factory default settings for data editing is typically set to NONE.
- A prefix (header) or suffix (terminator) may be applied to all messages (set via the Global Prefix/Suffix feature).
- Label ID: Pre-loaded Set can be applied to all symbologies, as well as customizing specific Label IDs (set via the Label ID: Set Individually Per Symbology feature).
- You can add any character from the ASCII Chart (from 0x00 0xFF) in Appendix C as a Prefix, Suffix or Custom Label ID.
- Enter prefixes and suffixes in the order in which you want them to appear in the output.

5.3.1 Global Prefix/Suffix

Up to 20 ASCII characters may be added as a prefix (header) in a position before the barcode data, and/or as a suffix (terminator) in a position following the barcode data as indicated in the figure below.



Figure 14 - Prefix and Suffix Positions

Example: Setting a Prefix

In this example, we'll set a prefix for all symbologies.

- 1. Determine which ASCII character(s) are to be added to scanned barcode data (max 20). In this example, we'll add a dollar sign ('\$') as a prefix.
- 2. Use the Chart in Appendix C to find the <u>hex equivalent(s)</u> for the desired character(s).
- 3. Go to page 61 and scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the SET GLOBAL PREFIX barcode.
- 5. Scan the <u>hex equivalent characters</u> from the keypad in Appendix B that represent the desired character string in step 1 above. The corresponding hex number for the '\$' character is 24. To enter this selection code, scan the '2' and '4' barcodes from Appendix B.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

- 6. If less than the expected string of 20 characters are selected, scan the ENTER/EXIT barcode to terminate the string.
- 7. Scan the ENTER/EXIT barcode once again to exit Programming Mode.

The resulting message string would appear as follows:

Scanned barcode data:12345

Resulting message string output: **\$12345**

No Read String

5

This defines the string to be displayed in case of No Read (On Line Mode only).

To set this feature:

- 1. Determine the desired character string (max 20).
- 2. Use the Chart in Appendix C to find the <u>hex equivalent(s)</u> for the desired character(s).
- 3. Go to page 61 and scan ENTER/EXIT PROGRAMMING MODE to enter Programming Mode.
- 4. Scan the barcode: SELECT NO READ STRING.
- 5. Scan the <u>hex equivalent characters</u> from the keypad in Appendix B that represent the desired character string in step 1 above.
- 6. If less than the expected string of 20 characters are selected, scan the ENTER/EXIT barcode to terminate the string.
- 7. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.

5.3.2 Code Identifiers

Label IDs

A Label ID is a customizable code of up to three ASCII characters (each can be from 0x00 - 0xFF), used to identify a barcode (symbology) type. It can be appended previous to or following the transmitted barcode data depending upon how this option is enabled. This feature provides options for configuring custom Label IDs as a pre-loaded set (see "Label ID: Pre-loaded Set") or individually per symbology (see "Label ID: Set Individually Per Symbology").

If you wish to program the reader to always include an industry standard label identifier for ALL symbology types, see "Global AIM ID" on page 143.

Label ID: Pre-loaded Set

The reader supports a pre-loaded set of Label IDs. The following table shows this set.

BARCODE SYMBOLOGY	Factory Label ID Set	Custom
EAN 8	А	
EAN 8 with 2 Add On	J	
EAN 8 with 5 Add On	К	
EAN 13	В	
EAN 13 with 2 Add On	L	
EAN 13 with 5 Add On	М	
UPC A	С	
UPC A with 2 Add On	F	
UPC A with 5 Add On	G	
UPC E	D	
UPC E with 2 Add On	Н	
UPC E with 5 Add On		
GTIN	\$A	
GTIN with 2 Add On	\$B	
GTIN with 5 Add On	\$C	
Code 39	V	
Code 32	Х	
Code 128	Т	
GS1-128	k	
ISBN	0	
ISSN	n	
ISBT 128	f	
Interleaved 2 of 5	Ν	
Standard 2 of 5	Р	
Codabar	R	
ABC Codabar	S	
Code 11	b	
GS1 Databar Omnidirectional	u	
GS1 Databar Expanded	t	
GS1 Databar Limited	V	
Code 93	U	
MSI	Z	

Label ID: Set Individually Per Symbology

To configure a Label ID individually for a single symbology:

- 1. Go to page 62 and scan the ENTER/EXIT barcode.
- 2. Select Label ID position as either BEFORE (Enable as Prefix) or AFTER (Enable as suffix) by scanning the appropriate barcode in the section "Transmit Custom Label IDs" on page 62. Reference the figure below for Label ID positioning options.
- 3. Scan a barcode to select the symbology for which you wish to configure a custom Label ID from the section "Custom Label Identifiers" starting on page 62.
- 4. Determine the desired character(s) (max 3) which will represent the Label ID for the selected symbology.
- 5. Use the Chart in Appendix C to find the <u>hex equivalent(s)</u> for the desired character(s).
- 6. Scan the <u>hex equivalent characters</u> from the keypad in Appendix B that represent the desired character string in step 4 above. If you wish to select an equal sign, the corresponding hex number for the '=' character is 3D. To enter this selection code, scan the '3' and 'D' barcodes from Appendix B.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

- 7. If less than the expected string of 3 characters are selected, scan the ENTER/EXIT barcode to terminate the string.
- 8. Scan the ENTER/EXIT barcode once again to exit Programming Mode.

This completes the steps to configure a Label ID for a given symbology.



Figure 15 - Label ID Position Options

Global AIM ID



This feature enables/disables addition of AIM IDs for all symbology types.

AIM label identifiers (as opposed to custom Label IDs you select yourself) can be included with scanned barcode data. AIM label identifiers consist of three characters as follows:

- A close brace character (ASCII ']'), followed by...
- A code character (see the table below), followed by...
- A modifier character (the modifier character is symbol dependent).



Figure 16 - AIM ID

AIM STANDARD IDENTIFIER TABLE					
BARCODE SYMBOLOGY	AIM STANDARD	BARCODE SYMBOLOGY	AIM STANDARD		
EAN 8] E 4	Code 39] A y		
EAN 8 with 2 Add On] E 5	Code 32] X y		
EAN 8 with 5 Add On] E 6	Code 128] C y		
EAN 8 with GS1-128 Add On		GS1-128] C y		
EAN 13] E 0	ISBN] C4		
EAN 13 with 2 Add On]E1	ISSN] C4		
EAN 13 with 5 Add On] E 2	ISBT 128] C4		
EAN 13 with GS1-128 Add On		Interleaved 2 of 5] <i>y</i>		
UPC A] X y	Standard 2 of 5] S y		
UPC A with 2 Add On] X y	Codabar] F y		
UPC A with 5 Add On] X y	ABC Codabar] X y		
UPC-A with GS1-128 Add On		Code 11] G y		
UPC E] X y	GS1 Databar Omnidirectional] e y		
UPC E with 2 Add On] X y	GS1 Databar Expanded] e y		
UPC E with 5 Add On] X y	GS1 Databar Limited] e y		
UPC-E with GS1-128 Add On		Code 93] G y		
GTIN] E 0	MSI] M y		
GTIN with 2 Add On] E 5				
GTIN with 5 Add On] E 6				
GTIN with GS1-128 Add On] E 2				

AIM standard identifiers are not defined for all codes: the X identifier is assigned to the code for which the standard is not defined. The *y* value depends on the selected options (check digit calculated or not, check digit tx or not, etc.).

5.3.3 Code Verifier

Match String

This is the string used as the match code for code verification. The Match String must be configured to include start/stop characters and check digits if their transmission is enabled. It is possible to define the Match string by inserting:

- all printable characters
- non printable ASCII characters
- No wild card characters are supported

To set this feature:

- 1. Determine the desired character string (max 32).
- 2. Use the Chart in Appendix C to find the <u>hex equivalent(s)</u> for the desired character(s).
- 3. Go to page 60 and scan ENTER/EXIT PROGRAMMING MODE to enter Programming Mode.
- 4. Scan the barcode: SELECT MATCH STRING.
- 5. Scan the <u>hex equivalent characters</u> from the keypad in Appendix B that represent the desired character string in step 1 above.
- 6. If less than the expected string of 32 characters are selected, scan the ENTER/EXIT barcode to terminate the string.
- 7. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.

Wrong Code String

This is the string sent in case of a mismatch (wrong code read).

To set this feature:

- 1. Determine the desired character string (max 20).
- 2. Use the Chart in Appendix C to find the hex equivalent(s) for the desired character(s).
- 3. Go to page 60 and scan ENTER/EXIT PROGRAMMING MODE to enter Programming Mode.
- 4. Scan the barcode: SELECT WRONG CODE STRING.
- 5. Scan the <u>hex equivalent characters</u> from the keypad in Appendix B that represent the desired character string in step 1 above.
- 6. If less than the expected string of 20 characters are selected, scan the ENTER/EXIT barcode to terminate the string.
- 7. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.

5.4 DIGITAL OUTPUTS

Activation Event

Defines the event activating the output.

Selections:

Disabled: the output is always in the selected idle state.

Good Read: the event occurs if the code is read.

No Read: the event occurs if no code is read.

Wrong Code: the event occurs if a code is successfully decoded but does not match the Verifier Code.

Deactivation Event

Defines the event deactivating the output.

Selections:

Timeout: the output deactivation event occurs after the deactivation timeout expires.

Reading Phase Active: the output deactivation event occurs, when a start reading phase event takes place.

Disabled: No deactivation event occurs.

Deactivation Timeout

When the Deactivation Event is Timeout, this indicates the maximum duration of the output pulse.

Active Level

Determines the active state of the output.

Each output can be represented as an NPN transistor; this transistor acts like a switch: so, when the transistor is OFF, it acts like an OPEN switch. On the contrary, when the transistor is ON, it acts like a CLOSED switch.

Selections:

Active Closed: the idle state of the output line is open, that is, the NPN transistor is OFF (like an open switch). When the output is activated, the transistor goes ON (like a closed switch).

Active Open: the idle state of the output line is closed, that is, the NPN transistor is ON (like a closed switch). When the output is activated, the transistor goes OFF (like an open switch).

5.5 POWER SAVE

Sleep Mode Timeout

Specifies the timeout value for the reader to enter low power Sleep Mode.

This is available only in On Line operating mode.

The reader wakes up when receiving an input signal or trigger button press. The reader cannot connect to Aladdin when in power save mode. It must first receive a wake up from the input signal or trigger button press.

5.6 CODE SELECTION

EAN-UPC Optional Add-On Timer

This option sets the time the reader will look for an add-on when an add-on fragment has been seen and optional add-ons are enabled.

To set this value:

- 1. Determine the desired setting in milliseconds (x 10 ms). (1-30).
- 2. Use the Chart in Appendix C to find the <u>hex equivalent</u> for the desired numeric value.
- 3. Go to page 81 and scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SET ADD-ON TIMER VALUE.
- 5. Scan the two <u>hex equivalent characters</u> from the keypad in Appendix B that represent the numeric value determined in step 1 above.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.

Decoding Level

Decoding Levels are used to configure a barcode symbology decoder to be very aggressive to very conservative depending on a particular customer's needs.

- Level 1 results in a very conservative decoder at the expense of not being able to read poorly printed or damaged labels.
- Level 5 results in a very aggressive decoder. This aggressive behavior allows decoding
 of poorly printed and damaged labels at the expense of increasing the likelihood of
 decoding errors.
- Level 3, which is the default setting, allows the majority of product labels to be decoded.

There are many factors that determine when to change the decoding level for a particular symbology. These factors include spots, voids, non-uniform bar/space widths, damaged labels, etc. that may be experienced in some barcode labels. If there are many hard to read or damaged labels that cannot be decoded using a conservative setting, increase the decoding level to be more aggressive. If the majority of labels are very good quality labels, or there is a need to decrease the possibility of a decoder error, lower the decoding level to a more conservative level.

Minimum Reads

This feature specifies the minimum number of consecutive times a label must be decoded before it is accepted as good read.

Interdigit Ratio

This feature specifies the ratio between an intercharacter space and module for given symbology labels.

To set this value:

- 1. Determine the desired ratio setting. (1-10).
- 2. Use the Chart in Appendix C to find the <u>hex equivalent</u> for the desired numeric value.
- 3. Go to relative Code Symbology page and scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SET INTERDIGIT RATIO.
- 5. Scan the two <u>hex equivalent characters</u> from the keypad in Appendix B that represent the numeric value determined in step 1 above.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.

Character Correlation

When correlation is enabled, the barcode reader will combine label data from multiple scans when decoding. Enabling correlation will help the scanner read labels that have some spots and/or voids. It may also help read labels that have damaged areas. Enabling correlation will also increase the chances that a label will be read incorrectly.

Stitching

This option enables/disables stitching for given symbology labels. When parts of a barcode are presented to the reader with this feature enabled, the barcode parts will be assembled by the reader's software, and the data will be decoded if all barcode proofing requirements are met.

Quiet Zones

This feature specifies the number of quiet zones for given symbology labels. Quiet zones are blank areas at the ends of a barcode and are typically 10 times the width of the narrowest bar or space in the label.

5.6.1 Concatenation

Concatenation Mode

Specifies the concatenation mode between Static and Dynamic. Static requires the concatenated codes to be read in the same scan (simultaneously). Dynamic allows the two codes to be read separately (within the specified Dynamic Concatenation Timeout.

Dynamic Concatenation Timeout

Specifies the timeout in 10-millisecond ticks used by the Dynamic Concatenation Mode.

To set this value:

- 1. Determine the desired setting in milliseconds (x 10 ms). (5-255).
- 2. Use the Chart in Appendix C to find the <u>hex equivalent</u> for the desired numeric value.
- 3. Go to relative Dynamic Concatenation Timeout page and scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SET TIMEOUT.
- 5. Scan the two <u>hex equivalent characters</u> from the keypad in Appendix B that represent the numeric value determined in step 1 above.

al a	If you make a mistake before the last character, scan the CANCEL barcode
~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	to abort and not save the entry string. You can then start again at the
NOTE	beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.

# 5.6.2 Set Length

Length Control allows you to select either variable length decoding or fixed length decoding for the specified symbology.

- Variable Length: any length between a minimum and maximum length (inclusive).
- Fixed Length: one or two different fixed lengths

# Set Length 1

This feature specifies one of the barcode lengths for Length Control. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode.

The length that can be set varies, depending on the symbology, however Length 1 cannot be 0. Reference the page for your selected symbology to see specific variables.



**Code 39, Code 128, I 2/5, S 2/5, Code 11, Code 93, MSI** The specified length <u>includes the check character (if any), data and ASCII</u> <u>shift characters</u>. It does not include the start/stop characters.



Follow these instructions to set this feature:

- 1. Determine the desired character length (varies depending on symbology).
- 2. Use the Chart in Appendix C to find the <u>hex equivalent(s)</u> for the desired numeric value.
- 3. Go to the Set Length page for your selected symbology and scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode to SELECT LENGTH 1 SETTING for your selected symbology.
- 5. Scan the two <u>hex equivalent characters</u> from the keypad in Appendix B that represent the numeric value determined in step 1 above.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.

# Set Length 2

This feature specifies one of the barcode lengths for Length Control. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode.

The length that can be set varies depending on the symbology. For Fixed Length Mode, a setting of 0 specifies to ignore Length 2 (use only Length 1). Reference the page for your selected symbology to see specific variables.



**Code 39, Code 128, I 2/5, S 2/5, Code 11, Code 93, MSI** The specified length <u>includes the check character (if any)</u>, <u>data and ASCII</u> <u>shift characters</u>. It does not include the start/stop characters.



**Codabar** The specified length <u>includes the check character (if any)</u>, data and the <u>start/stop characters</u>.

Follow these instructions to set this feature:

- 1. Determine the desired character length (varies depending on symbology).
- 2. Use the Chart in Appendix C to find the <u>hex equivalent(s)</u> for the desired numeric value.
- 3. Go to the Set Length page for your selected symbology and scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode to SELECT LENGTH 2 SETTING for your selected symbology.
- 5. Scan the two <u>hex equivalent characters</u> from the keypad in Appendix B that represent the numeric value determined in step 1 above.



6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure.

# **6 MAINTENANCE**

# 6.1 CLEANING

Clean the reading window periodically for continued correct operation of the reader.

Dust, dirt, etc. on the window may alter the reading performance.

Repeat the operation frequently in particularly dirty environments.

Use soft material and alcohol to clean the window and avoid any abrasive substances.





# 7 TECHNICAL FEATURES

Electrical Features	R	S232	ļ	JSB	
Power supply		5 Vdc ± 5	5%		
Consumption		350 mA; 1.	75 W		
Interfaces		RS232, L	JSB		
Inputs Input 1 (External Trigger), Voltage Current Consumption Minimum Pulse Duration	Optocoupled, p 5 to 3 9 mA 5	olarity insensitive 30 Vdc A max. ms			
Outputs Output 1, Output 2 V _{CE} Collector Current V _{CE Saturation} Power Dissipation	Optoo 30 Vc 40 mA cont 130 mA p 1V max. 80 mW max. a	coupled lc max. inuous max.; ulsed max. at 10 mA t 45 °C (ambient erature)			
Reading Features					
Max Scans/sec	320				
Max resolution		0.076 mm (\$	3mils)		
Readable codes:	EAN/UPC; Code 39, Code 32; Code 128, GS1-128, ISBT 128; Interleaved, Standard and Industrial 2 of 5; Codabar, ABC Codabar; GS1 Databar (Omnidirectional, Limited, Expanded); Code 93; Code 11; MSI; Plessey				
Physical Features	Sca	Scanner Scan En		n Engine	
	RS232	USB	RS232	USB	
Width	57 mm (2	2.24 inches)	50 mm (	1.96 inches)	
Length	50 mm (1	1.96 inches)	43 mm (	1.69 inches)	
Height	31 mm (1	I.22 inches)	21 mm (	0.82 inches)	
Weight - max.	120 g.         105 g.         30 g.           (4.2 oz.)         (3.7 oz.)         (1 oz.)			30 g. 1 oz.)	
Environmental Features					
Operating Temperature Storage Temperature	0° to +50 °C (+32° to +122 °F) -20° to +70 °C (-4° to +158 °F)				
Operating Pressure	106-80kPa / 0-2000 m above sea level				
Storage Pressure	107-	70kPa / 0-3000 m	above sea le	evel	
Protection Class EN 60529	90% non condensing IP64 -				

# 7.1 READING DIAGRAMS

The following diagram was obtained according to the conditions listed below. Code reading with skew angles of less than 10° may cause decreased performance due to direct light reflection.



(0,0) corresponds to the scanner output window.

#### **Conditions:**

Static Code Reading Exposure Mode = Continuous Code = Code 39 Quality = Grade A Lighting = No Ambient Light (0 Lux) Pitch =  $0^{\circ}$ Skew =  $10^{\circ}$ Tilt =  $0^{\circ}$ 



# A DEFAULT PARAMETERS TABLE

Parameter	Default	Your Setting	Page
GLOBAL INTERFACE FEATURES			
Host Commands — Obey/Ignore	Obey		
RS232 ONLY			
Baud Rate	9600		
Data Bits	8 Data Bits		
Stop Bits	1 Stop Bit		
Parity	None		
RS232/USB-COM			
Intercharacter Delay	No Delay		
Disable Character	'D'		
Enable Character	'E'		
ACK NAK Options	Disable		
ACK Character	'ACK'		
NAK Character	'NAK'		
ACK NAK Timeout Value	600 ms		
ACK NAK Retry Count	3 Retries		
ACK NAK Error Handling	Ignore Errors Detected		
USB-KBD			
Keyboard Country Mode	US		
Keyboard Intercode Delay	No Delay		
Send Control Characters	CTRL+KEY		
USB Keyboard Speed	1 ms		
	<b></b>		
	Iriggered		
Operating Modes	On Line		
Phase Off Event	l rigger Stop		
Fineoul	STV		
Serial Stan			
Serial Stop	EIX		
LED INUICATION	Enabled		
	Continuous		
Exposure Mode			
Reading Conditions	Auto		
Data Transmission	On Decode		
Code Verifier Mode	Disabled		
Match String	Disabled		
Wrong Code String			
Case Conversion	Disabled		
Global Prefix (Header)	CR		
Global Suffix (Terminator)			
No Read String	CAN		
Transmit AIM IDs	Disabled		
Transmit Custom Label IDs	Disabled		
Custom Label Identifiers	See table on page 141		
	200 table bil page i li	E	1

Parameter	Default	Your Setting	Page
DIGITAL OUTPUTS			
OUPUT 1			
Activation Event	Disabled		
Deactivation Event	Disabled		
Deactivation Timeout	500 ms		
Active Level	Active Closed		
OUPUT 2			
Activation Event	Disabled		
Deactivation Event	Disabled		
Deactivation Timeout	500 ms		
Active Level	Active Closed		
POWER SAVE			
Sleep Mode Timeout	Disabled		
CODE SELECTION			
Positive/Negative Background	Positive		
UPC-A			
UPC-A	Enable		
Check Character Tx	Enable		
Expand to EAN-13	Disable		
Number System Tx	Enable		
Minimum Reads	One Read		
Coupon Control			
	Enable		
Check Character Tx	Enable		
Expand to LIPC-A	Disable		
Expand to EAN-13	Disable		
Number System Tx	Enable		
Minimum Reads	Two Reads		
FAN_13	1001(6803		
	Enable		
Check Character Ty	Enable		
	Disable		
	Disable		
Flag 1 Character	Enable		
Minimum Doodo			
	Enable only UPC-A		
EAN-8	Enable		
	Enable		
Expand to EAN-13	Disable		
Minimum Reads	One Read		
Add-Ons	<b>D</b> : 11		
P2 Add-On	Disable		
P5 Add-On	Disable		
P2 Minimum Reads			
P5 Minimum Reads			
Optional Add-On Timer	70 ms		
EAN/UPC Global Settings			
GTIN Format	Disable		
Decoding Level	Level 2		
Character Correlation	Disable		
In-Store Minimum Reads	Two Reads		

Α

Parameter	Default	Your Setting	Page
Code 39			
Code 39	Enable		
Code 39 Full ASCII	Disable		
Code Length Control	Variable		
Set Length	2 - 50		
Code 32 (Italian Pharma)	Disable		
Code 32 Check Tx			
Code 32 Start/Stop Tx			
Code 39 Check Options			
Check Calculation	Disable		
Code 39 Check Tx	Enable		
Code 39 Start/Stop Tx	Disable		
Code 39 Decoding Options			
Minimum Reads	Two Reads		
Decoding Level	Level 3		
Character Correlation	Disable		
Interdigit Ratio	4		
Quiet Zones	Auto		
Stitching	Enable		
Code 128 (GS1-128)			
Code 128	Enable		
GS1-128 Enable	Enable GS1-128		
	(Transmit Labels in		
	GS1-128 Data Format)		
Code Length Control	Variable		
Set Length	1 - 80		
Expand to Code 39	Disable		
Check Options			
Check Tx	Disable		
Function Character Tx	Disable		
Sub-Code Change Tx	Disable		
Decoding Options			
Minimum Reads	One Read		
Decoding Level	Level 3		
Character Correlation	Disable		
Quiet Zones	Auto		
Stitching	Enable		
ISBT 128			
ISBT 128 Concatenation	Disable		
Force Concatenation			
Concatenation Mode			
Dynamic Concat. Timeout			
Chain 0 - Chain 15			
Interleaved 2 of 5 (I 2 of 5)	<b>_</b>		
1 2 of 5	Disable		
Standard 2 of 5			
Standard 2 of 5	Disable		
Industrial 2 of 5			
Industrial 2 of 5	Disable		
Codabar			
Codabar	Disable		
Code 11			
Code 11	Disable		
GS1 Databar Omnidirectional			
GS1 Databar Omnidirectional	Disable		

Α

Parameter	Default	Your Setting	Page
GS1 Databar Expanded			
GS1 Databar Expanded	Disable		
GS1 Databar Limited			
GS1 Databar Limited	Disable		
Code 93			
Code 93	Disable		
MSI			
MSI	Disable		
Plessey			
Plessey	Disable		

Α

**B** KEYPAD

В



c

E



D



# C ASCII/HEX/DECIMAL CHART

Char	Hex	Dec	Char	Hex	Dec	Char	Hex	Dec
NUL	00	0	*	2A	42	U	55	85
SOH	01	1	+	2B	43	V	56	86
STX	02	2	,	2C	44	W	57	87
ETX	03	3	-	2D	45	Х	58	88
EOT	04	4		2E	46	Y	59	89
ENQ	05	5	/	2F	47	Z	5A	90
ACK	06	6	0	30	48	[	5B	91
BEL	07	7	1	31	49	Ň	5C	92
BS	08	8	2	32	50	]	5D	93
HT	09	9	3	33	51	^	5E	94
LF	<b>0A</b>	10	4	34	52	_	5F	95
VT	0B	11	5	35	53	`	60	96
FF	0C	12	6	36	54	а	61	97
CR	0D	13	7	37	55	b	62	98
SO	0E	14	8	38	56	С	63	99
SI	0F	15	9	39	57	d	64	100
DLE	10	16	:	3A	58	е	65	101
DC1	11	17	• •	3B	59	f	66	102
DC2	12	18	<	3C	60	g	67	103
DC3	13	19	=	3D	61	h	68	104
DC4	14	20	>	3E	62	i	69	105
NAK	15	21	?	3F	63	j	6A	106
SYN	16	22	@	40	64	k	6B	107
ETB	17	23	A	41	65	I	6C	108
CAN	18	24	В	42	66	m	6D	109
EM	19	25	С	43	67	n	6E	110
SUB	1 <b>A</b>	26	D	44	68	0	6F	111
ESC	1B	27	E	45	69	р	70	112
FS	1C	28	F	46	70	q	71	113
GS	1D	29	G	47	71	r	72	114
RS	1E	30	Н	48	72	S	73	115
US	1F	31	I	49	73	t	74	116
SPACE	20	32	J	4A	74	u	75	117
!	21	33	K	4B	75	V	76	118
"	22	34	L	4C	76	W	77	119
#	23	35	М	4D	77	х	78	120
\$	24	36	N	4E	78	У	79	121
%	25	37	0	4F	79	Z	7 <b>A</b>	122
&	26	38	P	50	80	{	7B	123
	27	39	Q	51	81		7C	124
(	28	40	R	52	82	}	7D	125
)	29	41	S	53	83	~	7E	126
			Т	54	84	DEL	7F	127

Char	Hex	Dec	Char	Hex	Dec	Char	Hex	Dec
	80	128		AA	170		D5	213
	81	129		AB	171		D6	214
	82	130		AC	172		D7	215
	83	131		AD	173		D8	216
	84	132		AE	174		D9	217
	85	133		AF	175		DA	218
	86	134		B0	176		DB	219
	87	135		B1	177		DC	220
	88	136		B2	178		DD	221
	89	137		B3	179		DE	222
	8 <b>A</b>	138		B4	180		DF	223
	8B	139		B5	181		E0	224
	8C	140		B6	182		E1	225
	8D	141		B7	183		E2	226
	8E	142		<b>B</b> 8	184		E3	227
	8F	143		B9	185		E4	228
	90	144		BA	186		E5	229
	91	145		BB	187		E6	230
	92	146		BC	188		E7	231
	93	147		BD	189		E8	232
	94	148		BE	190		E9	233
	95	149		BF	191		EA	234
	96	150		C0	192		EB	235
	97	151		C1	193		EC	236
	98	152		C2	194		ED	237
	99	153		C3	195		EE	238
	9A	154		C4	196		EF	239
	9B	155		C5	197		F0	240
	9C	156		C6	198		F1	241
	9D	157		C7	199		F2	242
	9E	158		C8	200		F3	243
	9F	159		C9	201		F4	244
	A0	160		CA	202		F5	245
	A1	161		CB	203		F6	246
	A2	162		CC	204		F7	247
	A3	163		CD	205		F8	248
	A4	164		CE	206		F9	249
	A5	165		CF	207		FA	250
	A6	166		DO	208		FB	251
	A7	167		U1	209		FC	252
	A8	168		D2	210		FD	253
	A9	169		D3	211		FE	254
				D4	212		FF	255

С

# D RESERVED CHARACTERS

D

Reserved Characters	Hex Value	Notes
[SOH]	0x01	
[BEL]	0x07	
#	0x23	
\$	0x24	
0	0x30	
3	0x33	
В	0X42	
D	0X44	
E	0X45	
F	0X46	
R	0X52	
S	0X53	
h	0x68	
i	0x69	
S	0x73	
t	0x74	
[FF]	0xFF	
<b>Reserved Strings</b>		
C <up 36="" chars="" to="">[CR]</up>	0x43 <xxx> 0x0D</xxx>	C can be used without [CR] or inside a string (not the first character)
01[CR]	0x30 0x31 0x0D	
34[CR]	0x33 0x34 0x0D	

	DECLARATION OF CONFORMITY	EC-126 Y Rev.: 2 Pag.: 1 di 1
CE		
Datalogic Automation S Via Lavino 265 40050 Monte San Pietro Bologna - Italy www.automation.datalogic.co	.r.l. om	
declares that the		
r	C1200; Compact CCD Reader	
and all its models		
are in conformity with the require	ments of the European Council Directives listed below	:
	2004 / 108 / EC EMC Directive	
This Declaration is based upon c EN 55022 ( CLASS A ITE ), Deceмве	<b>R 2010:</b> INFORMATION TECHNOLOGY EQUIPMENT RADIO DISTURBANCE CHARACTERISTICS	
EN 61000-6-2, SEPTEMBER 2005:	LIMITS AND METHODS OF MEASUHEMENTS ELECTROMAGNETIC COMPATIBILITY (EMC) PART 6-2: GENERIC STANDARDS - IMMUNITY F ENVIRONMENTS	OR INDUSTRIAL
Monte San Pietro, January 20th, 20	12	
Auguality Manager Mowelly Redo	UNI EN ISO 9001	let

www.automation.datalogic.com