
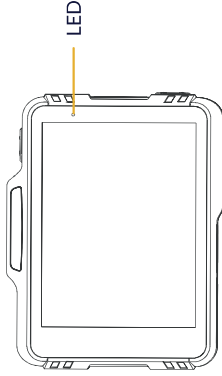


Before your first use, please make sure the battery is fully charged via the included AC adapter and cable.

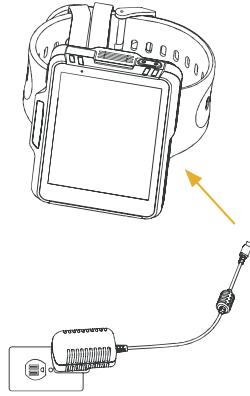

### Charging LED / Battery status

 
Blue LED on	Fully charged
Red LED on	Charging in progress
Red LED flashes	Low-battery alert

1

### Appearance


USB type-C

SIM Card




User-defined key

 Camera/  
Flashlight



Power key

 

3

2

### Quick settings

#### Power key

1 When the terminal is powered off, hold down the power key for 3 seconds to switch the terminal on.

2 When the terminal is powered on, briefly press the power key to lock the screen.

#### User-defined key

1 The user-defined key will be set as "Home Key" by default.  
2 To reset the user-defined key: go to "Quick Setting" > "Key Map", then set the parameters per your needs.

#### Touch the screen

1 Back to previous page: swipe inward from the left or right edge of the screen.  
2 Back to the desktop: swipe the screen from bottom to top.  
3 Switch to new task: swipe the screen from bottom to top, then hold on until the recently used apps display.

4

5

### Support information



For more information and technical support, please visit [newland-id.com/contact](http://newland-id.com/contact)

#### WD1

Name: WD1-NW10 Watch Scanner  
Manufacturer: Newland EMEA

All technical information are subject to the actual performance, Newland reserve the right of final explanations.

PN: 1060090482

Newland Europe BV  
Rolweg 25  
4104 AV Culemborg  
The Netherlands



7

- 1 Do not charge the device in a hot or humid environment. The temperature will affect the charging efficiency.
- 2 The terminal contains a built-in battery. Please do not try to replace it yourself in order to avoid damage.
- 3 Do not use the terminal's wireless functionalities where wireless device use is prohibited or where it may cause interference or danger, such as in mines or gas stations.
- 4 Use only a dry, soft cloth to clean the terminal. Cleaning with a wet cloth or other chemical cleaners may deform and shorten the service life of the keypad and shell of the terminal.
- 5 The temperature should not be too low or high during use. This could cause malfunction. Please use the terminal under the permitted temperature.
- 6 If the terminal is damaged due to a drop or water, contact the service center. Do not try to repair it yourself.

6



BSR idware GmbH  
Jakob-Harjes-Str.3  
A-5120 Salzburg  
<https://www.bsi.at>  
sales@bsi.at



WD1  
Watch Scanner



Quick Guide V1.0