

MC9190-G

Quick Start Guide




BSR idware GmbH
Jakob-Haringer-Str.3
A-5020 Salzburg
Web: www.bsr.at

BATTERY INSERTION


<http://www.zebra.com/mc9190g>

See User Guide for more information


Front View

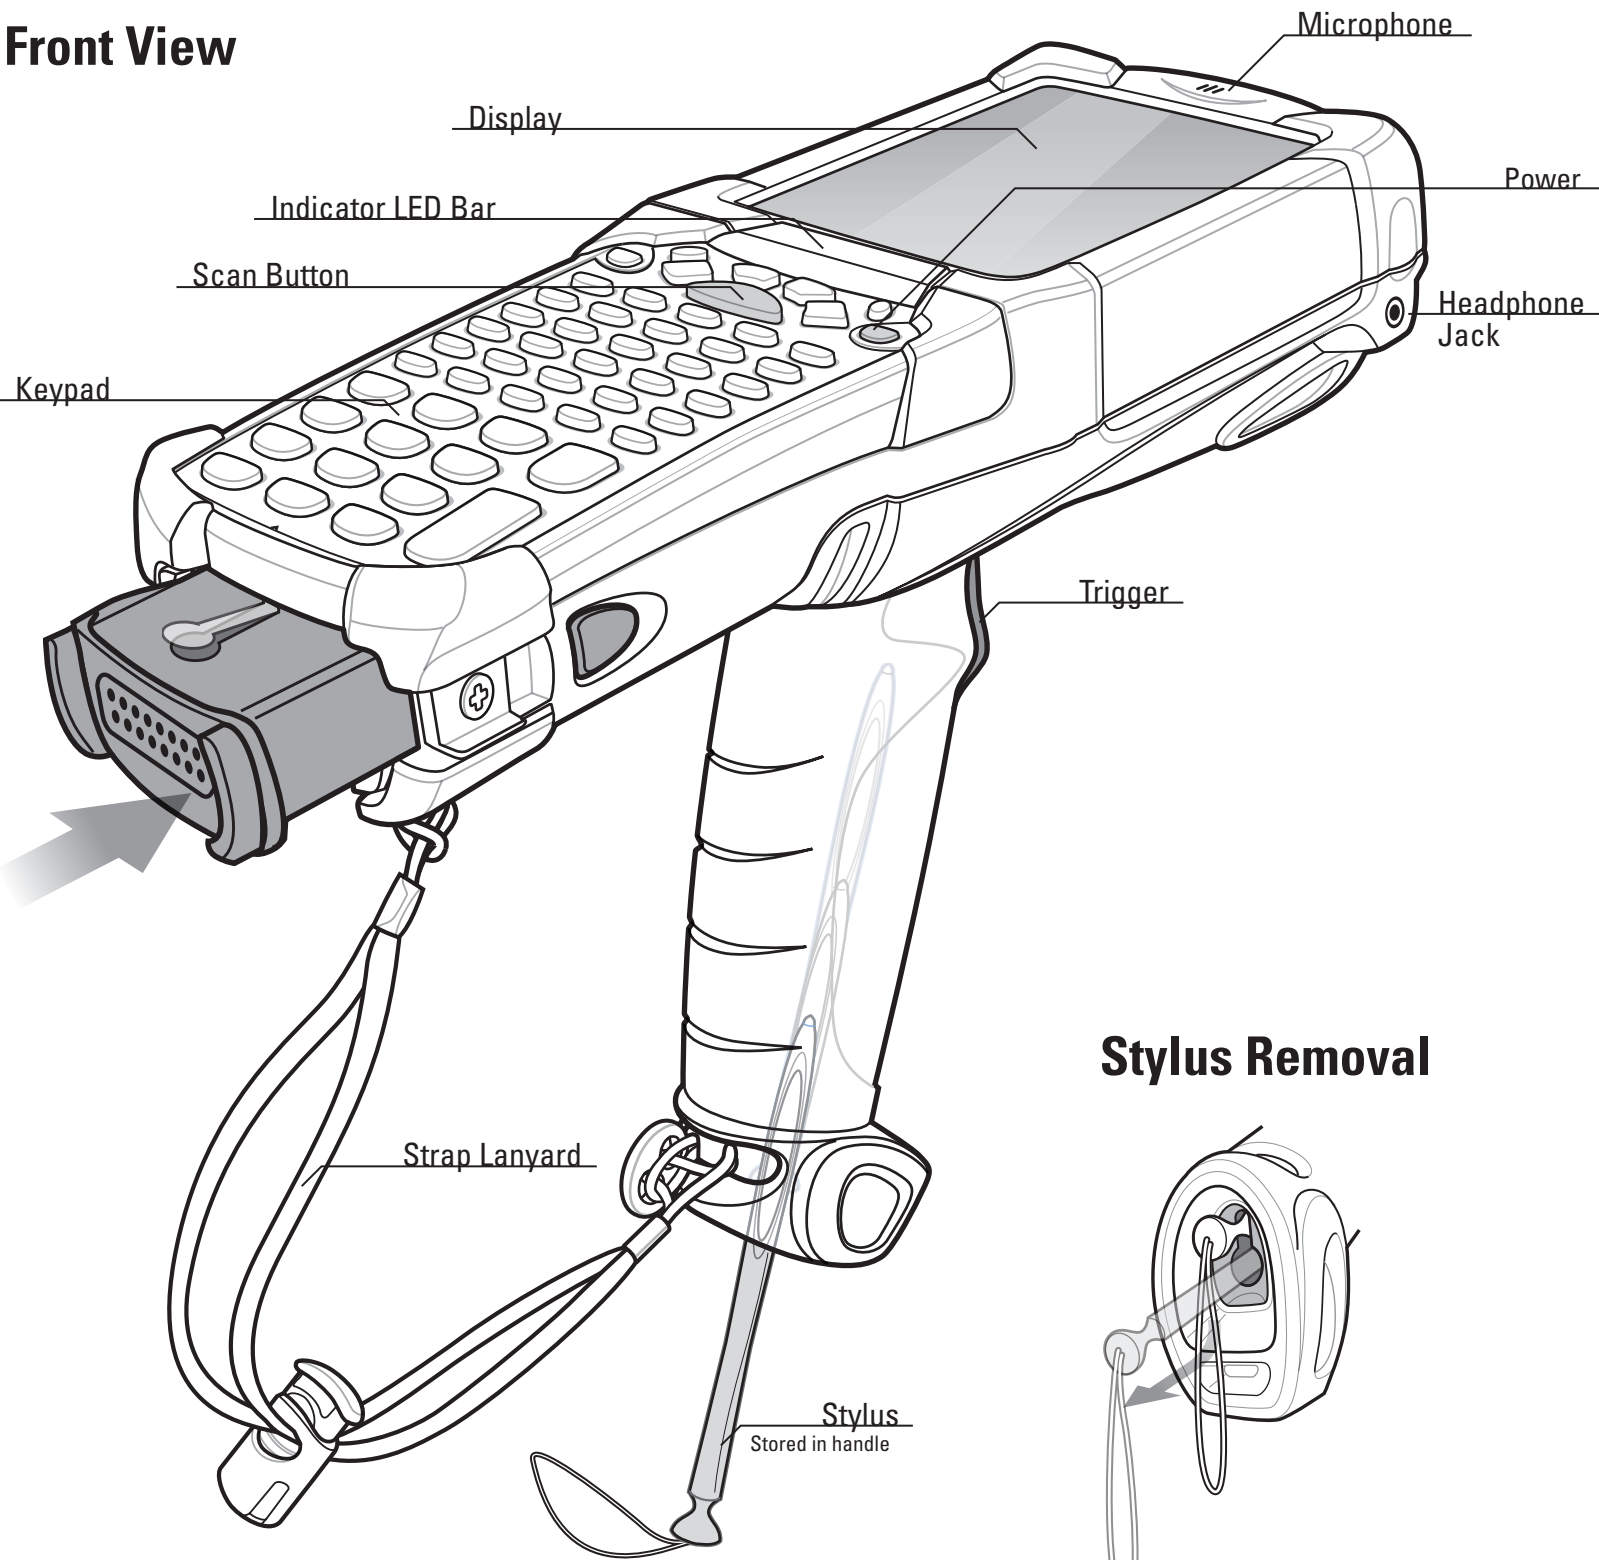



Battery Removal

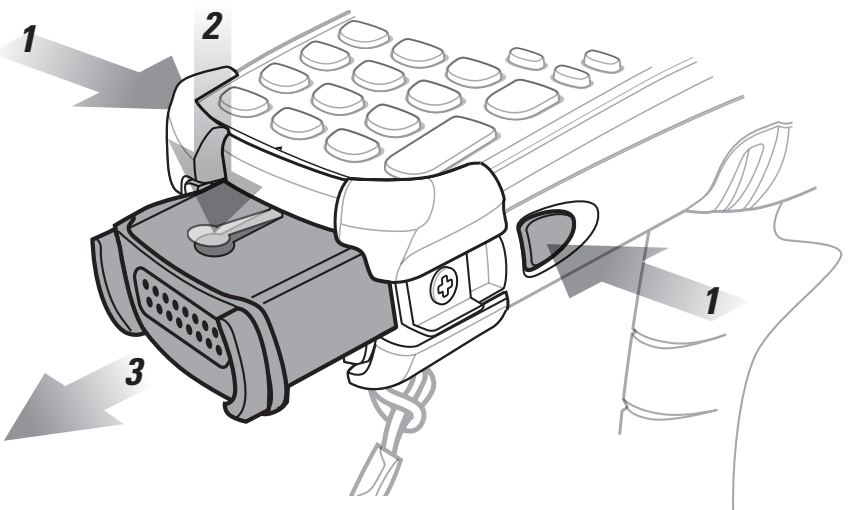


Stylus Removal

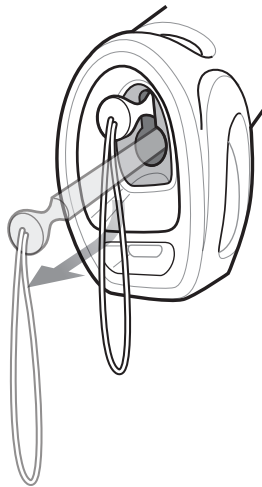

SNAP-ON ACCESSORY INSTALLATION

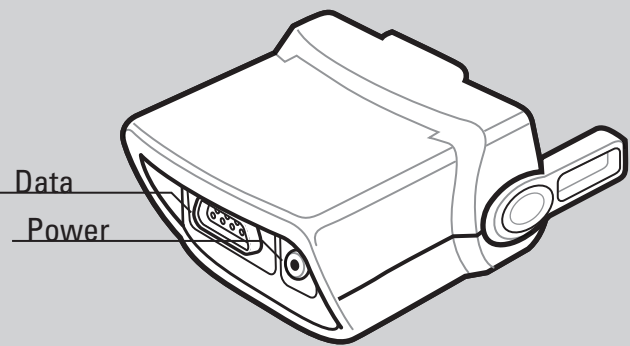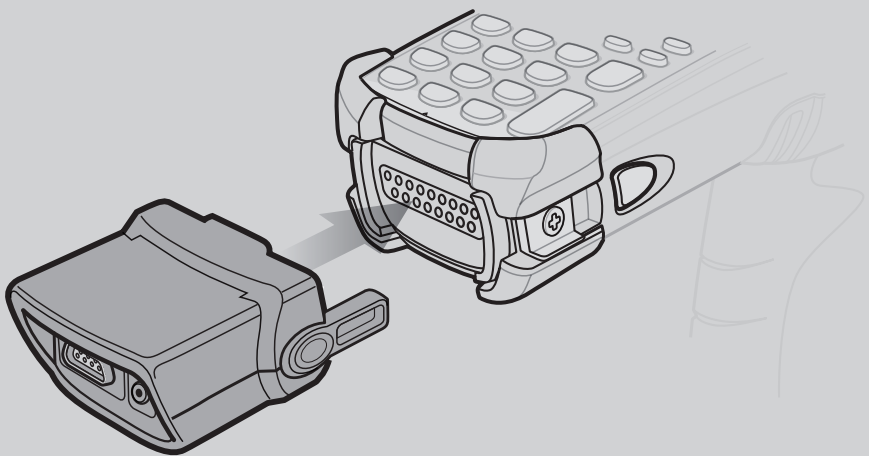


Cable Adapter Module

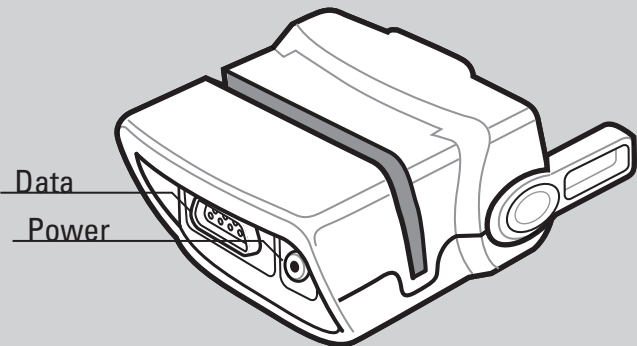


Magnetic Stripe Reader

CHARGING INSTRUCTIONS


⦿ = LED Indicator Location Slow Flash = Normal Charge Solid Amber = Full Charge Fast Flash = Charging Error

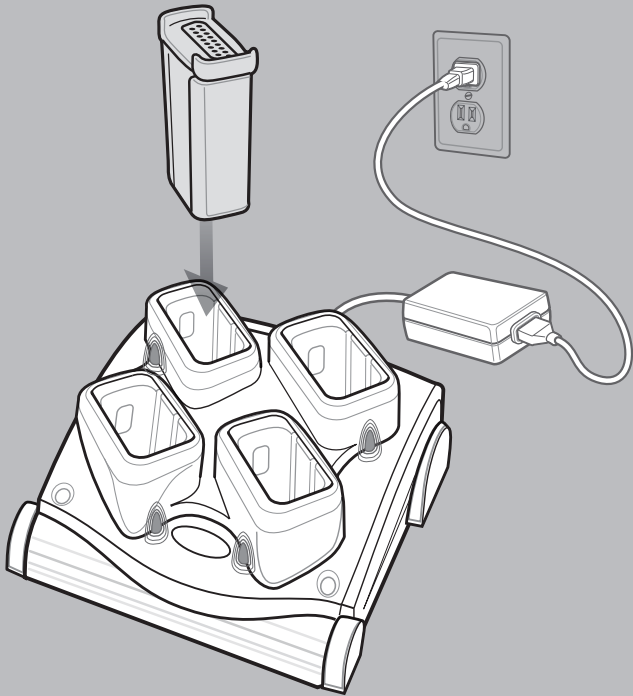

Four Slot Spare Battery Charger

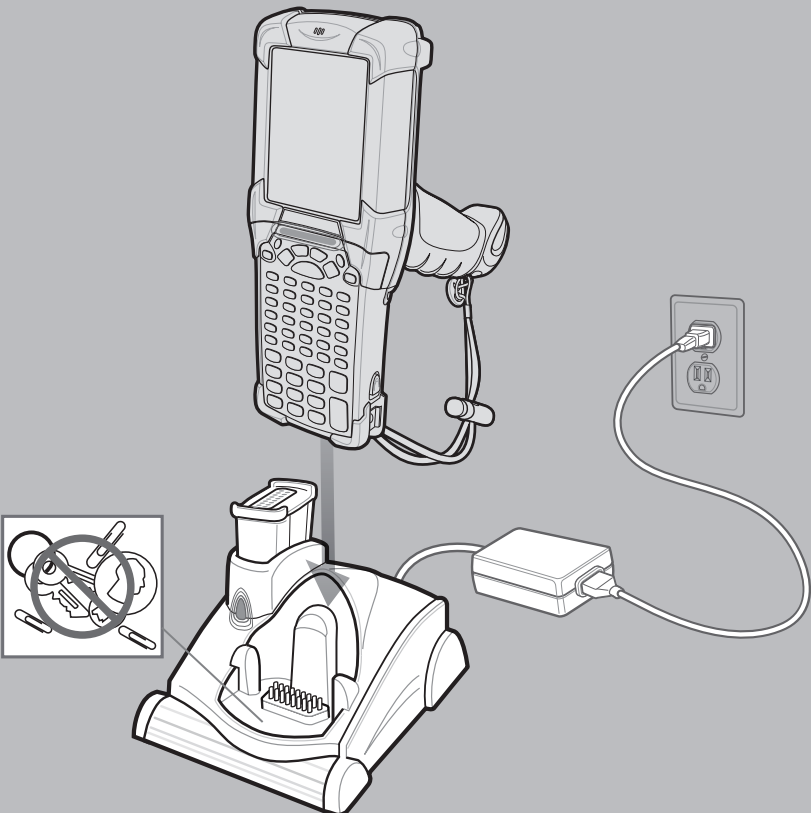


Single Slot Serial/USB Cradle

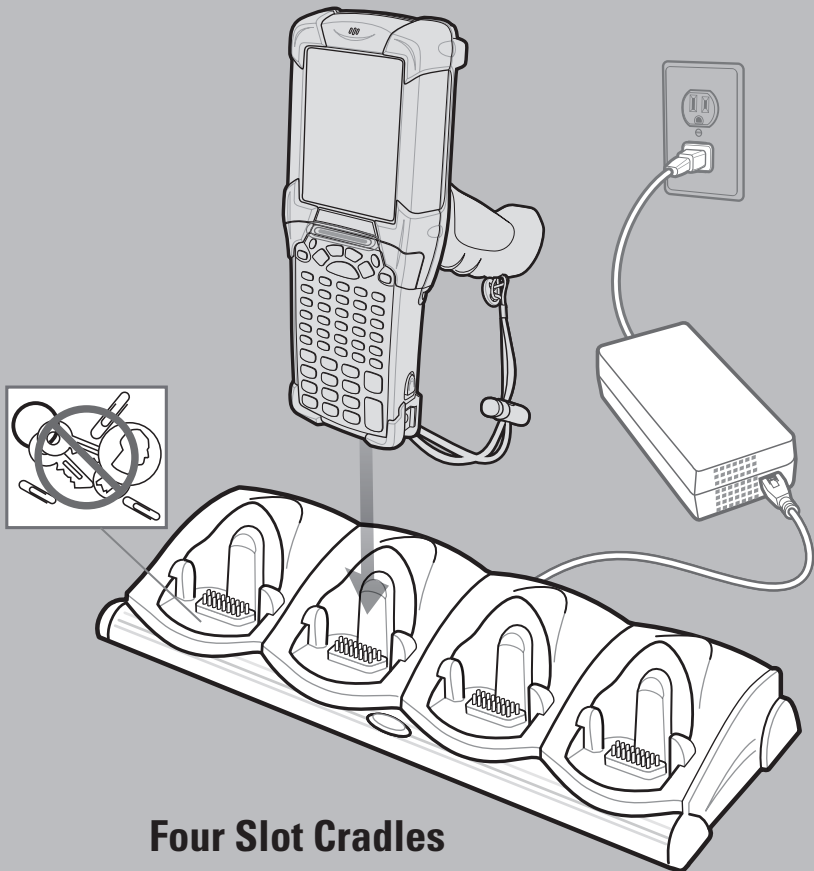




Four Slot Cradles
Charge-Only Cradle and Ethernet Cradle

OPTIMUM IMAGING AND SCANNING POSITIONS



Laser Scanning

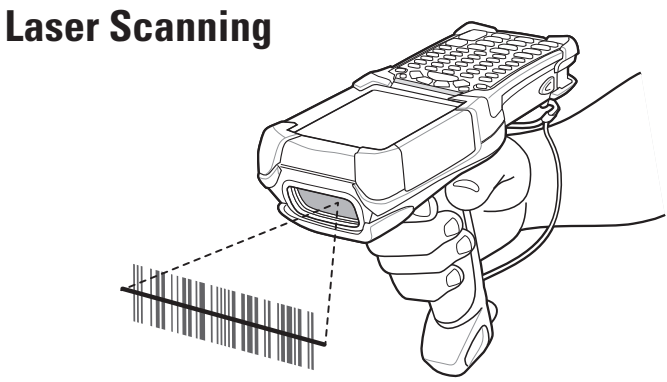

Standard Range Imaging

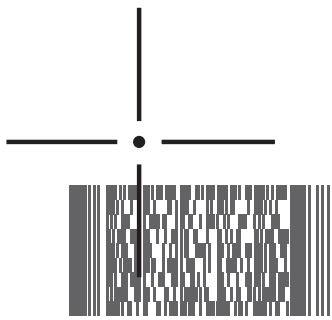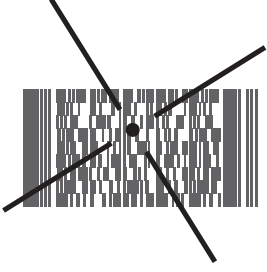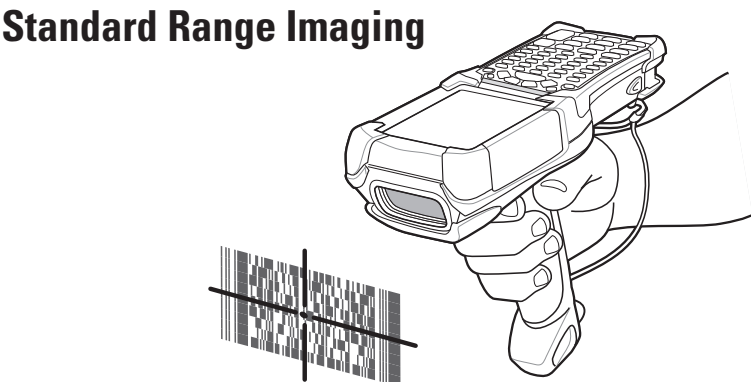


Long Range Imaging

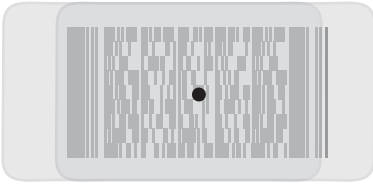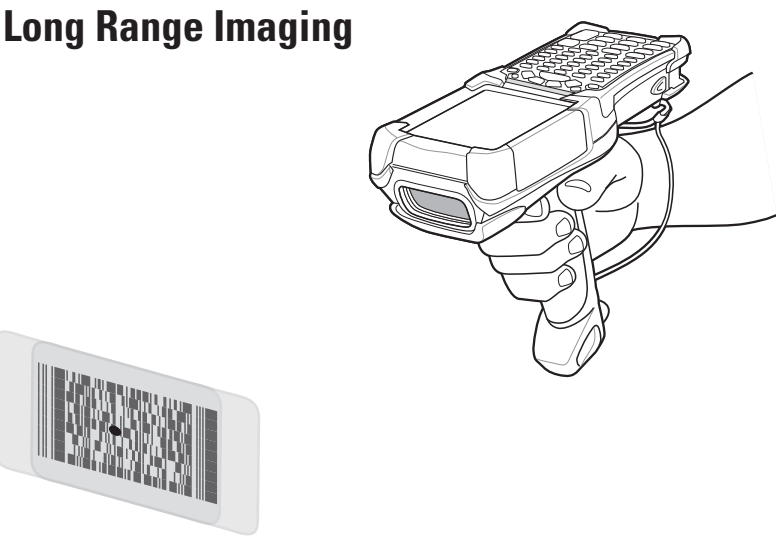


OPTIMUM UPRIGHT BODY POSTURE



AVOID EXTREME WRIST ANGLES

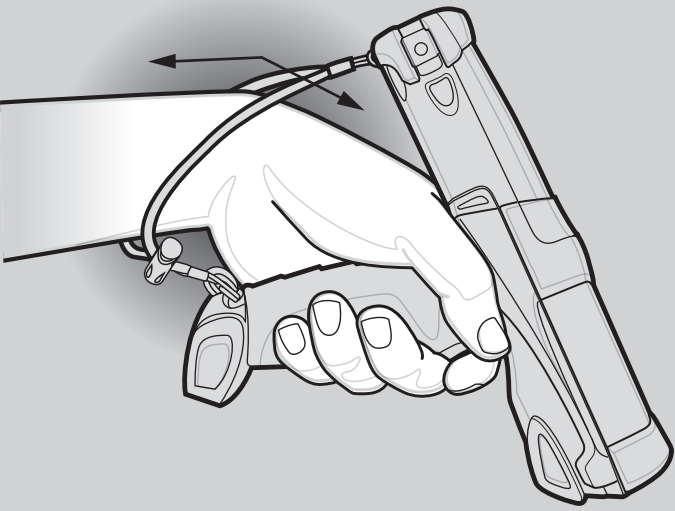

ALTERNATE LEFT AND RIGHT HANDS
TAKING BREAKS AND TASK ROTATION RECOMMENDED

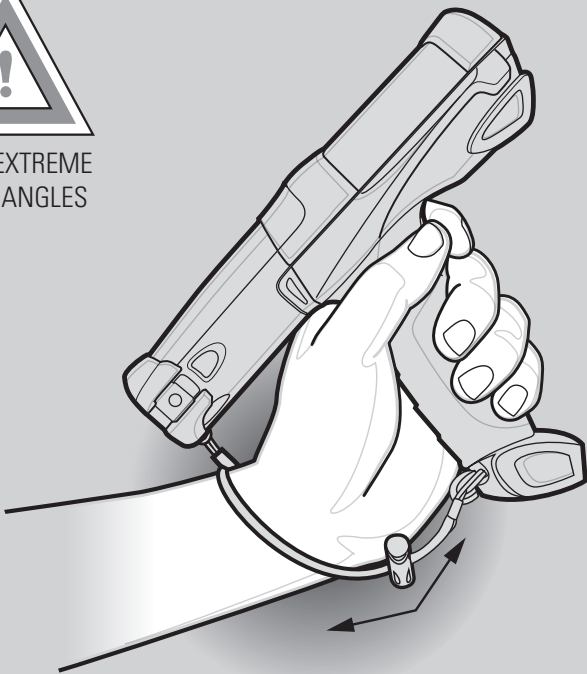


Low Scanning

Alternate left and right knees



AVOID BENDING

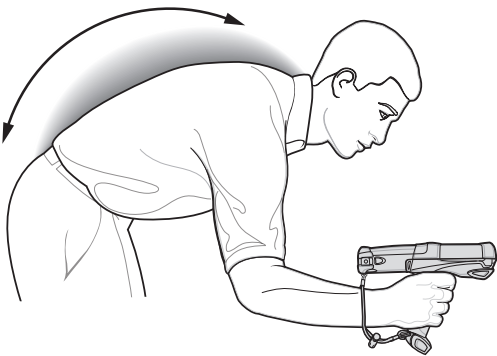

Alternate left and right hands



AVOID REACHING



High Scanning

Use a ladder



Taking breaks and
task rotation recommended



Zebra Technologies Corporation, Lincolnshire, IL USA
Zebra and the Zebra head graphic are registered trademarks of ZIH Corp. The Symbol logo is a registered trademark of Symbol Technologies, Inc., a Zebra Technologies company.
© 2015 Symbol Technologies, Inc.



72-139206-02 Rev. B – April 2015



<http://www.zebra.com/mc9190g>

MC9190-G

Recommended Usage Guide