



TC75 QUICK START GUIDE

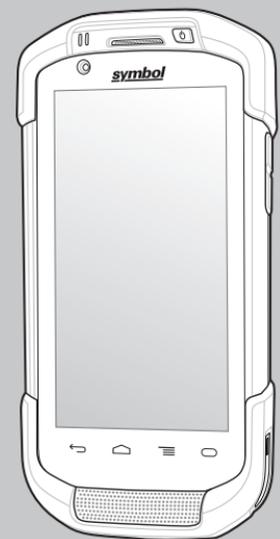


FEATURES

Note: Remove protective shipping film that covers the touch screen, exit window and camera window before using.

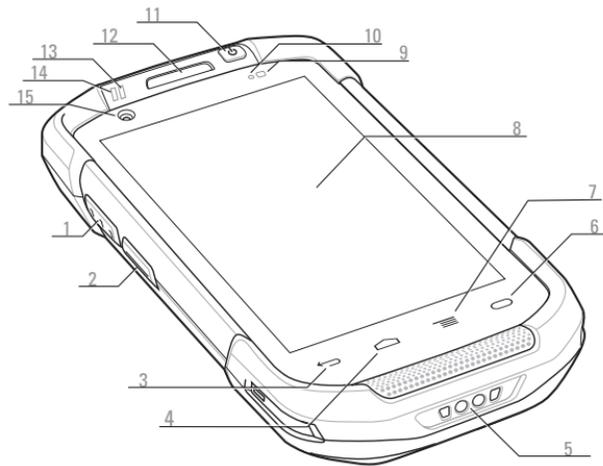

- | | |
|-----------------------------|------------------------------|
| 1 Scan Button | 8 Touch Screen |
| 2 PTT Button (programmable) | 9 Light Sensor |
| 3 Back Button | 10 Proximity Sensor |
| 4 Home Button | 11 Power Button |
| 5 Power Input | 12 Receiver |
| 6 Search Button | 13 Charging/Notification LED |
| 7 Menu Button | 14 Data Capture LED |
| | 15 Front-facing Camera |

Note 1: To reset the TC75, press and hold the Power button until the menu appears and then select **Reset**.

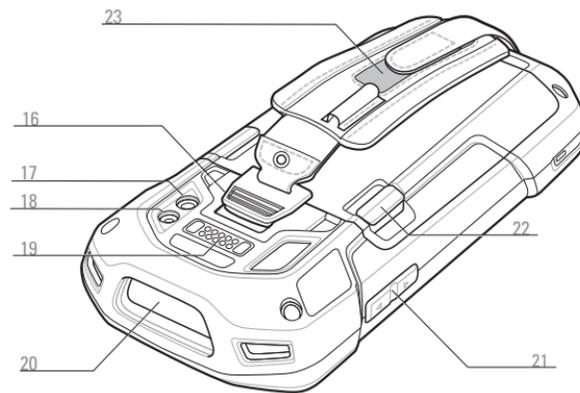

- | | |
|------------------------------|--------------------------|
| 16 Hand Strap Mounting Point | 20 Exit Window |
| 17 Rear-facing Camera | 21 Volume Button |
| 18 Camera Flash | 22 Battery Release Latch |
| 19 Interface Connector | 23 Hand Strap |


Notifications

Data Capture LED:

- Green: Good Decode
- Red: Data capture in process
- Blue: Application notification

Charging/Notification LED:


- Slow blinking amber: Battery charging
- Solid green: Fully charged
- Fast blinking amber: Charging error
- Slow blinking red: Charging aged battery
- Solid red: Fully charged aged battery
- Fast blinking red: Charging error aged battery
- Slow blinking blue: Application notification

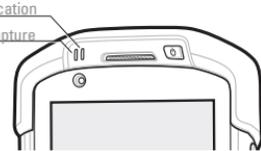


SIM/SAM CARD INSTALLATION

1. Lift the access door.
2. Insert the SIM/SAM card into the card holder. Push the card all the way into the card holder.

NOTE:
Proper position of the SIM/SAM card — the card connector (i.e., gold contacts) should be facing down. Nano Slot 1 is default slot for SIM card. Goto **Settings** to configure the default SIM slot, if enabled by your system administrator.

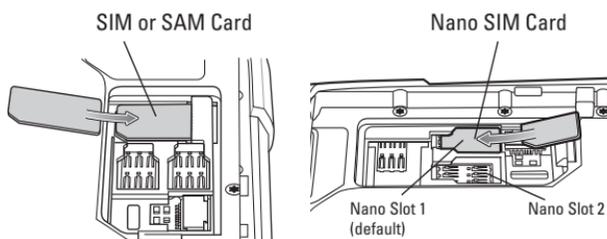


3. Replace the access door. Ensure that it is properly seated.

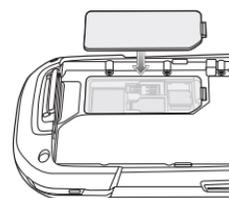


SD CARD INSTALLATION

1. Lift the access door.
2. Insert the microSD card into the card holder. Push the card all the way into the card holder.

NOTE:
Proper position of the microSD card — the card connector (i.e., gold contacts) should be facing down.

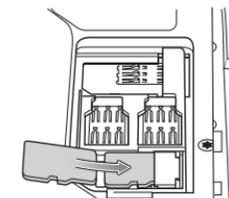


3. Replace the access door. Ensure that it is properly seated.

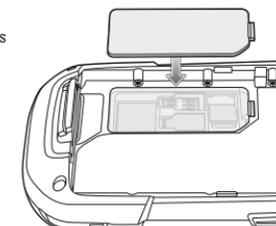


HANDSTRAP AND BATTERY INSTALLATION


1. Remove hand strap filler plate.
2. Insert the hand strap plate into the handstrap slot.
3. Insert the bottom of the battery into the battery compartment.
4. Rotate the battery down into the battery compartment and press the battery down until it snaps into position.

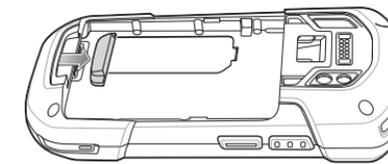


2. Insert the hand strap plate into the handstrap slot.

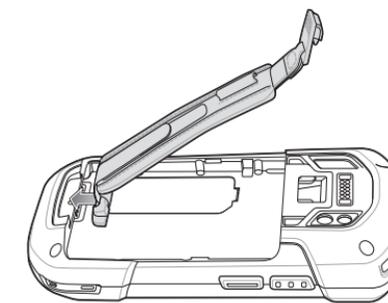


3. Insert the bottom of the battery into the battery compartment.

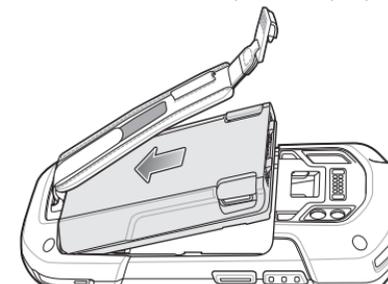

4. Rotate the battery down into the battery compartment and press the battery down until it snaps into position.

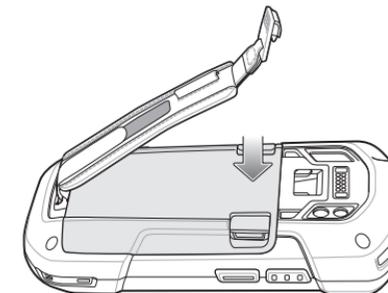


5. Place the hand strap clip into the hand strap attachment slot and pull down to lock in place.

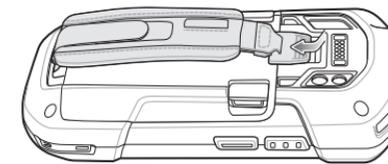

6. Lift the hand strap ribbon off the hook material.
7. Slide the pad and adjust the ribbon for best fit.
8. Press the ribbon down to secure to hand strap.

BATTERY INSTALLATION

1. Insert the bottom of the battery into the battery compartment.
2. Rotate the battery down into the battery compartment.
3. Press the battery down until it snaps into position.

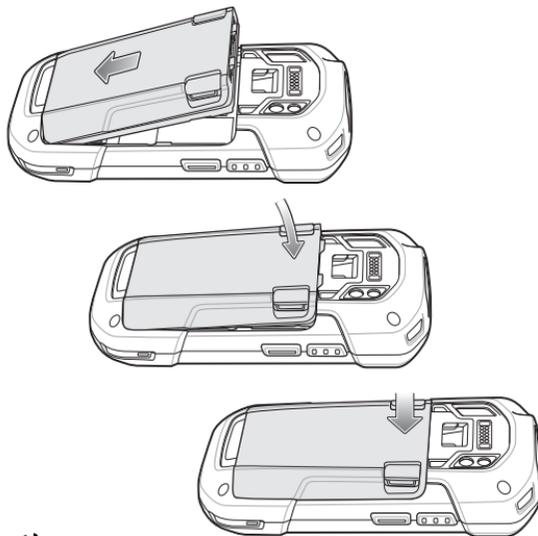

Zebra Technologies Corporation
Lincolnshire, IL, U.S.A.

Zebra and the stylized Zebra head are trademarks of ZIH Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners. The Symbol logo is a registered trademark of Symbol Technologies, Inc., a Zebra Technologies company.

© 2015 ZIH Corp and/or its affiliates. All rights reserved.




MN001727A02 Rev. A — May 2015




BATTERY REPLACEMENT

1. Remove any accessory attached to the device.
2. Press the Power button until the menu appears.
3. Touch **Battery Swap**.
4. Touch **Enter Battery Swap Mode**.
5. Touch **Continue**. The Data Capture LED lights red.
6. Wait for the LED to turn off.
7. Unlatch the hand strap. Push the hand strap clip up toward the top of the TC75 and then lift.
8. Press the battery release latches in and lift the battery from the TC75.
9. Insert the bottom of the battery into the battery compartment.
10. Rotate the battery down into the battery compartment.
11. Press the battery down until it snaps into position.
12. Place the hand strap clip into the hand strap attachment slot and pull down to lock into place.
13. Press the Power button to turn on the TC75.

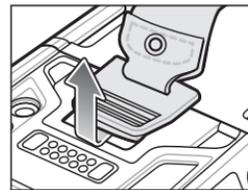

ACCESSORIES


5-Slot Charge Only Cradle

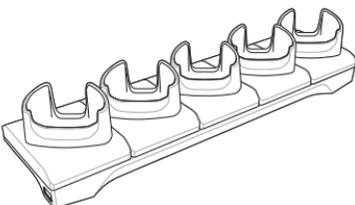

5-Slot Charge Only Cradle with Battery Charger



 
Holster




Trigger Handle



5-Slot Ethernet Cradle

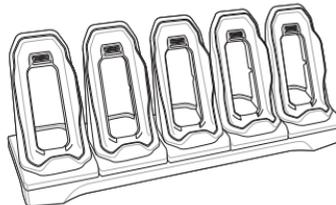

2-Slot Charge Only Cradle

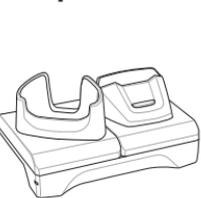

Charging Cable Cup




4-Slot Battery Charger



2-Slot USB/Ethernet Cradle



Snap-On USB Cable

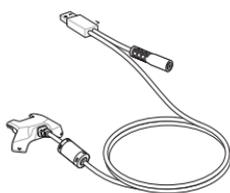

Battery Charger Adapter



Audio Adapter



Magnetic Stripe Reader




Stylus with Tether



DATA CAPTURE OPTIONS

Imaging

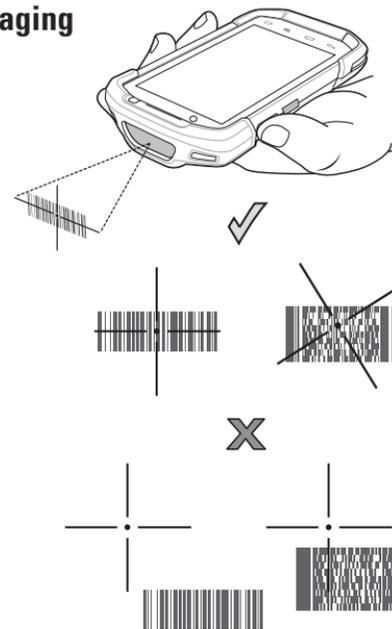

1. Ensure that an application is open and a text field is in focus (text cursor in text field).
2. Point the exit window at the bar code.
3. Press and hold the **Scan** button.
4. The red laser aiming pattern turn on to assist in aiming. When the TC75 decodes the bar code the Data Capture LED light green and a beep sounds.
5. Release the **Scan** button.

Camera Photo



1. Open the Camera application.
2. Point the TC75 camera at an object.
3. Touch the on-screen shutter button.

AVOID EXTREME WRIST ANGLES

